


# Minimum RC™


## T-34 Mentor Assembly Instructions




1.

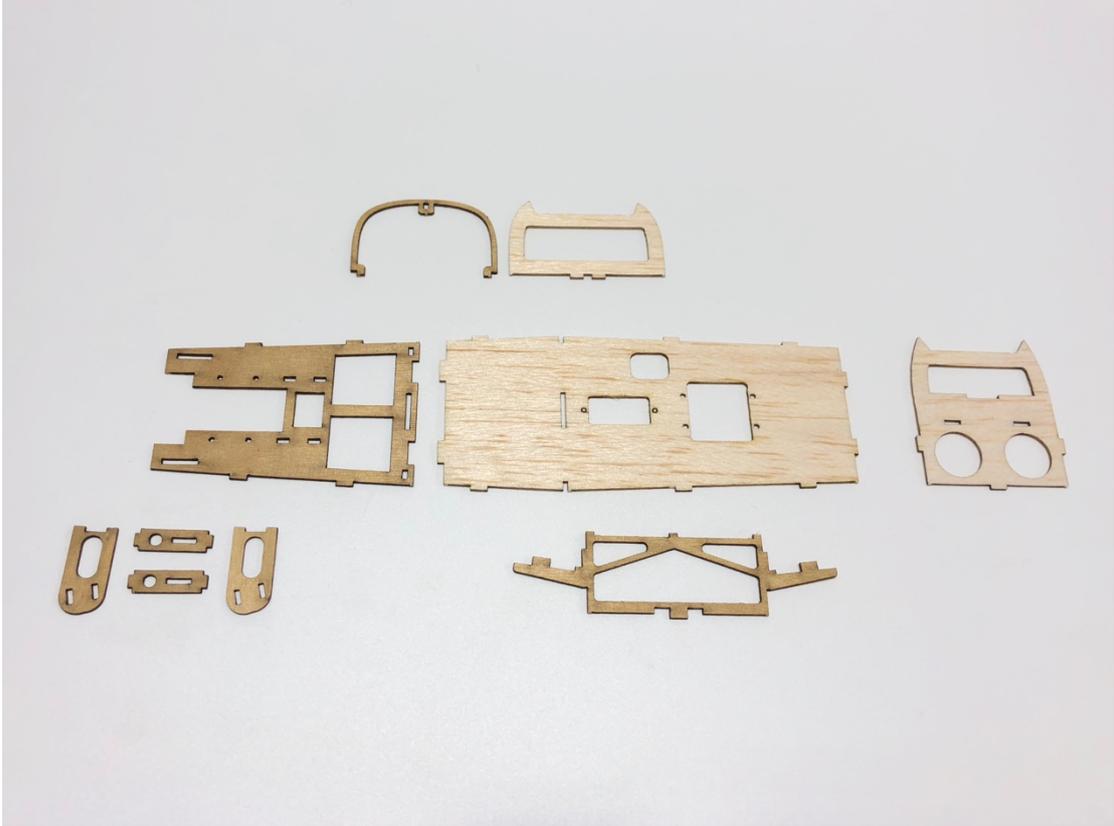


2.

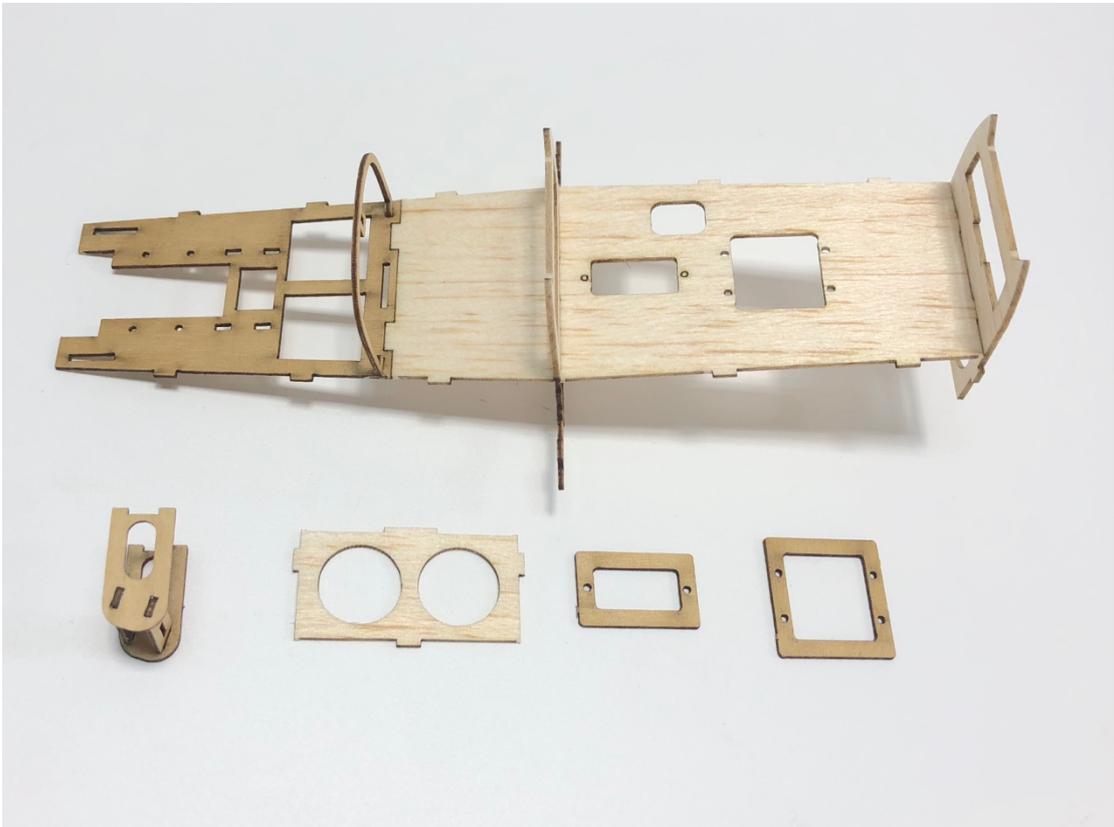


3.

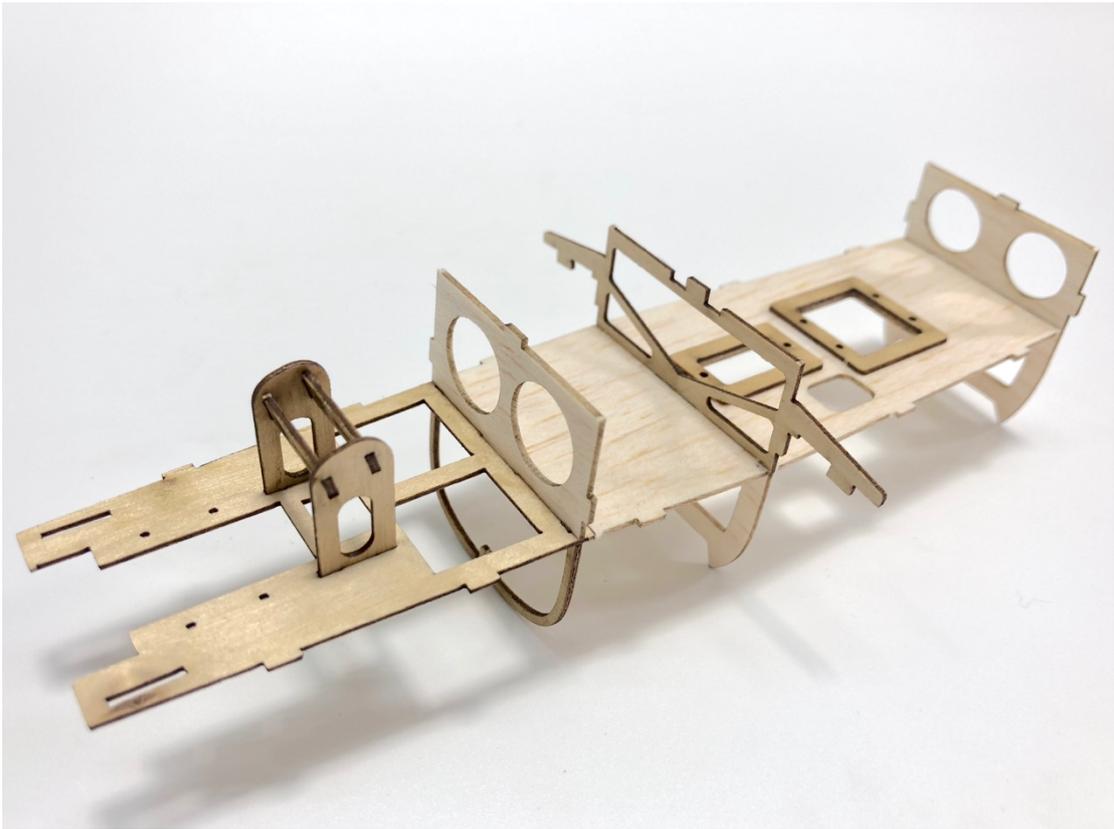

4. Front landing gear base.

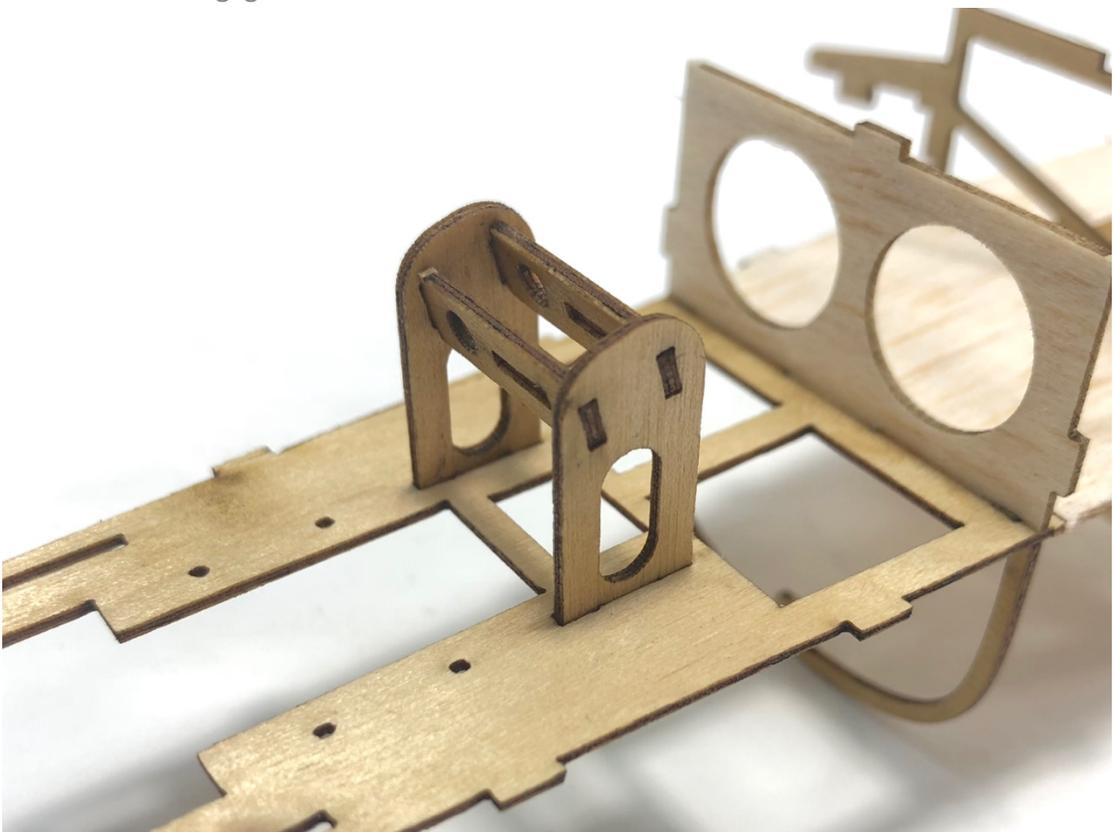

5.

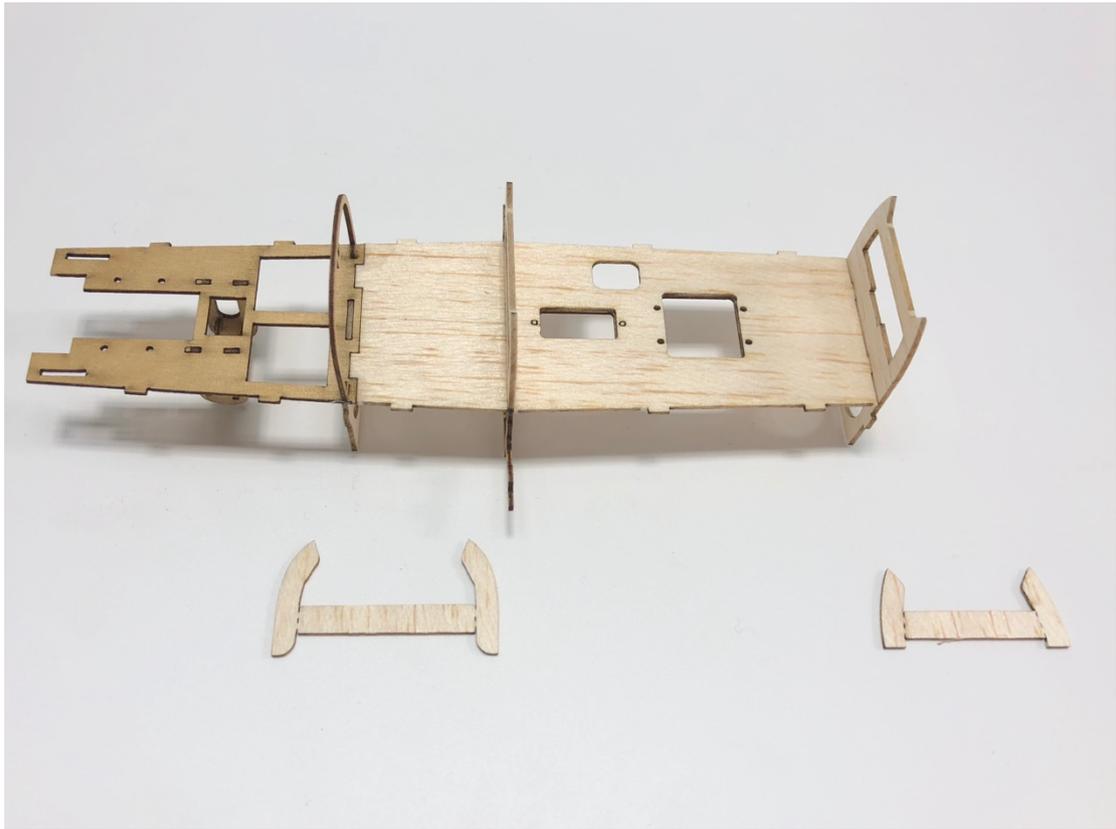


6.



7.




8. Cut off the extra parts.

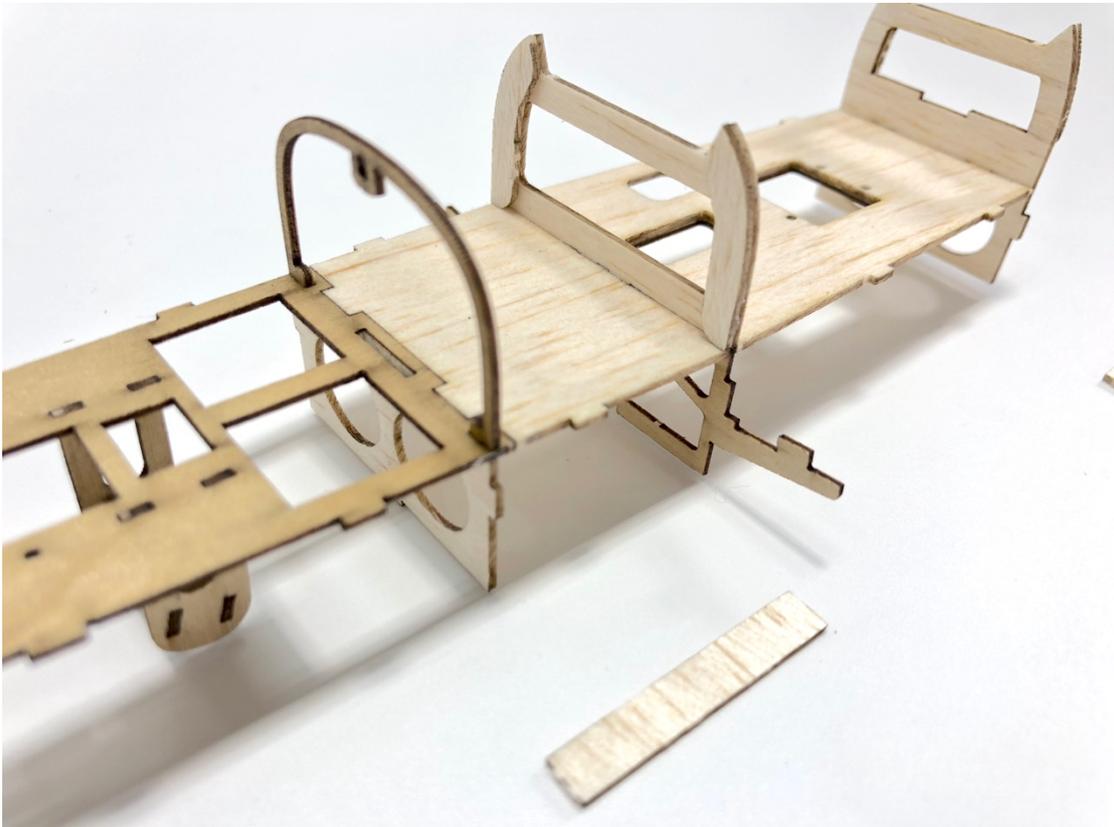


9.



10. Use a ruler to push the crease along the dotted line.  
Attention: There are differences between the left and right panels of the fuselage, the rear end of the right panel has a grooving reserved slot.

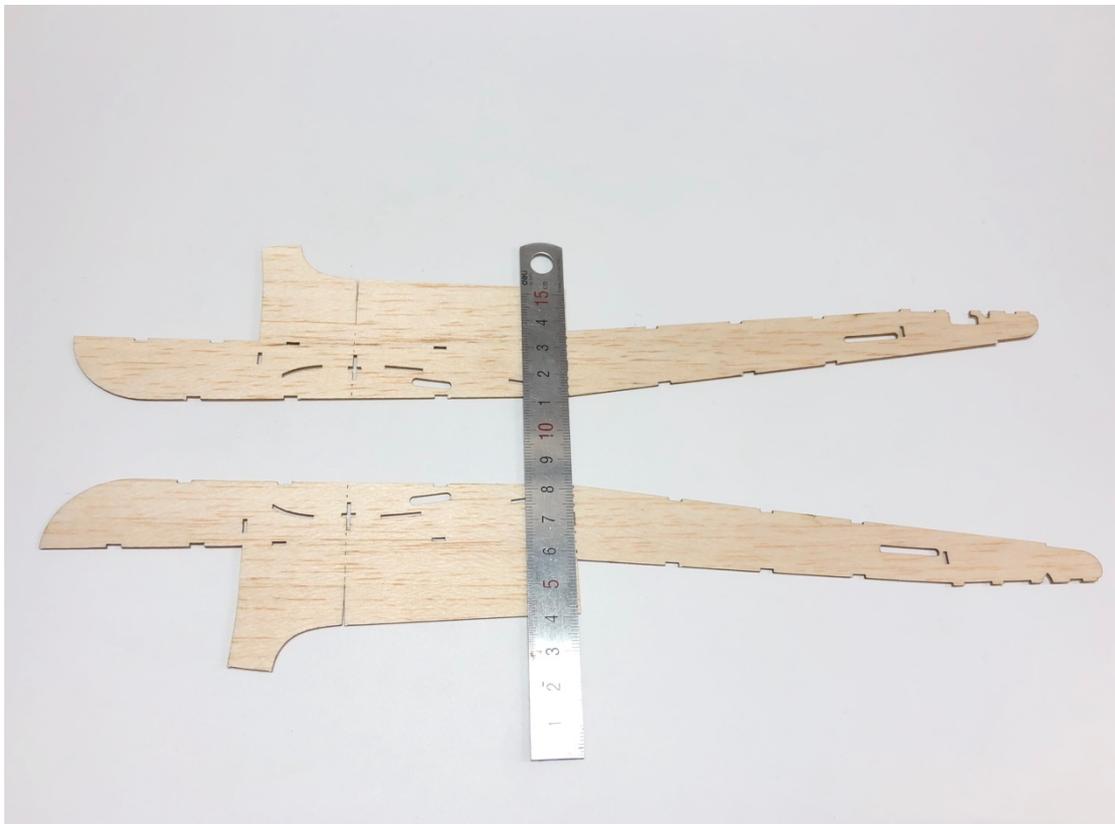


11.

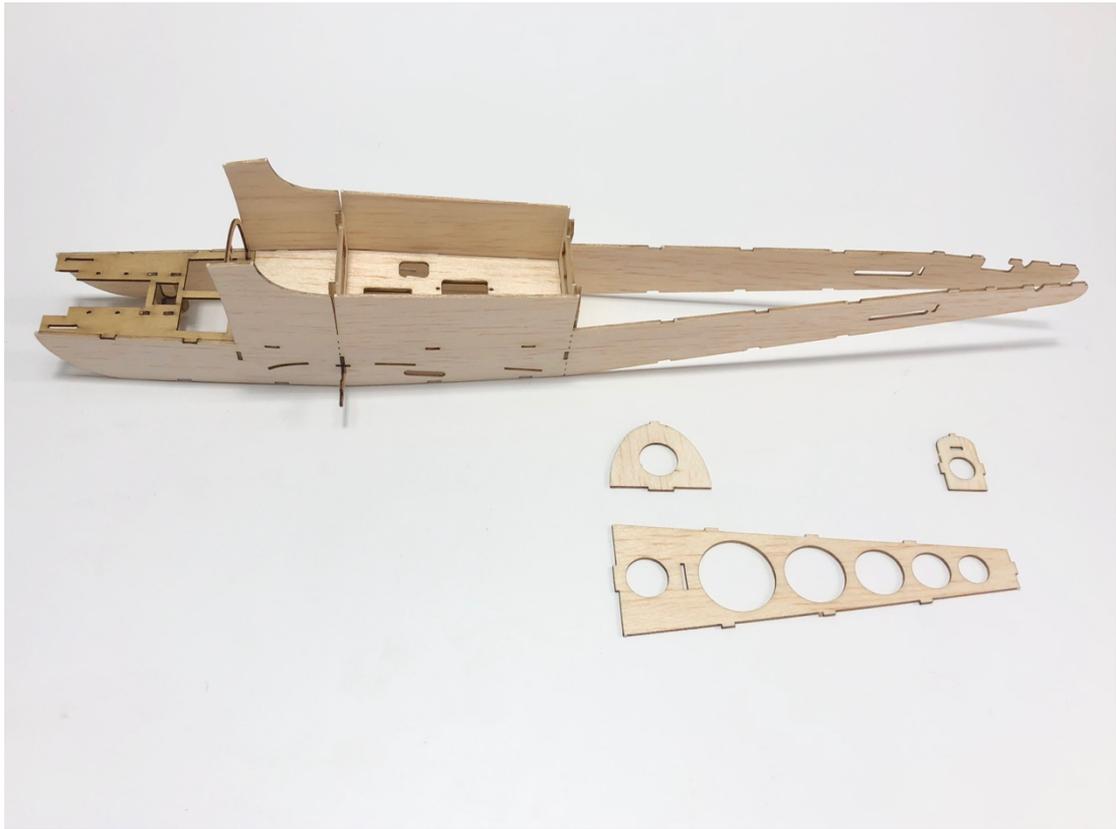

12.




13.

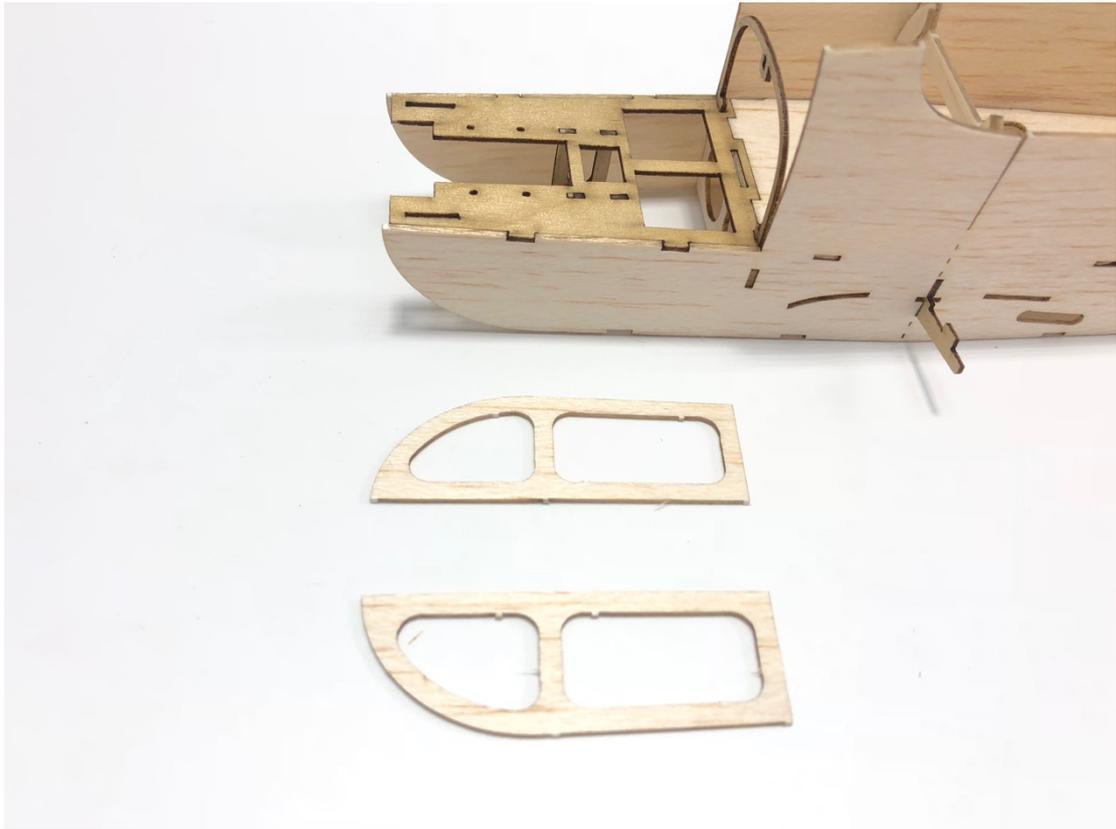


14.




15.

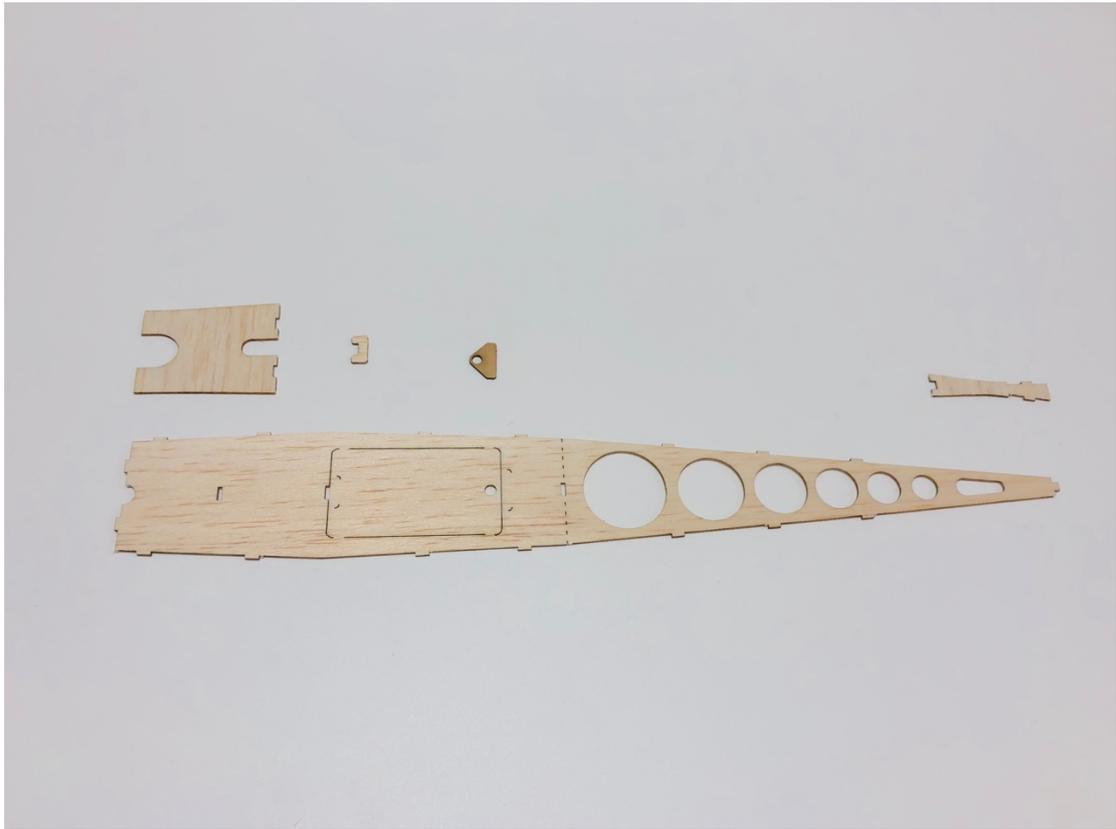

16.

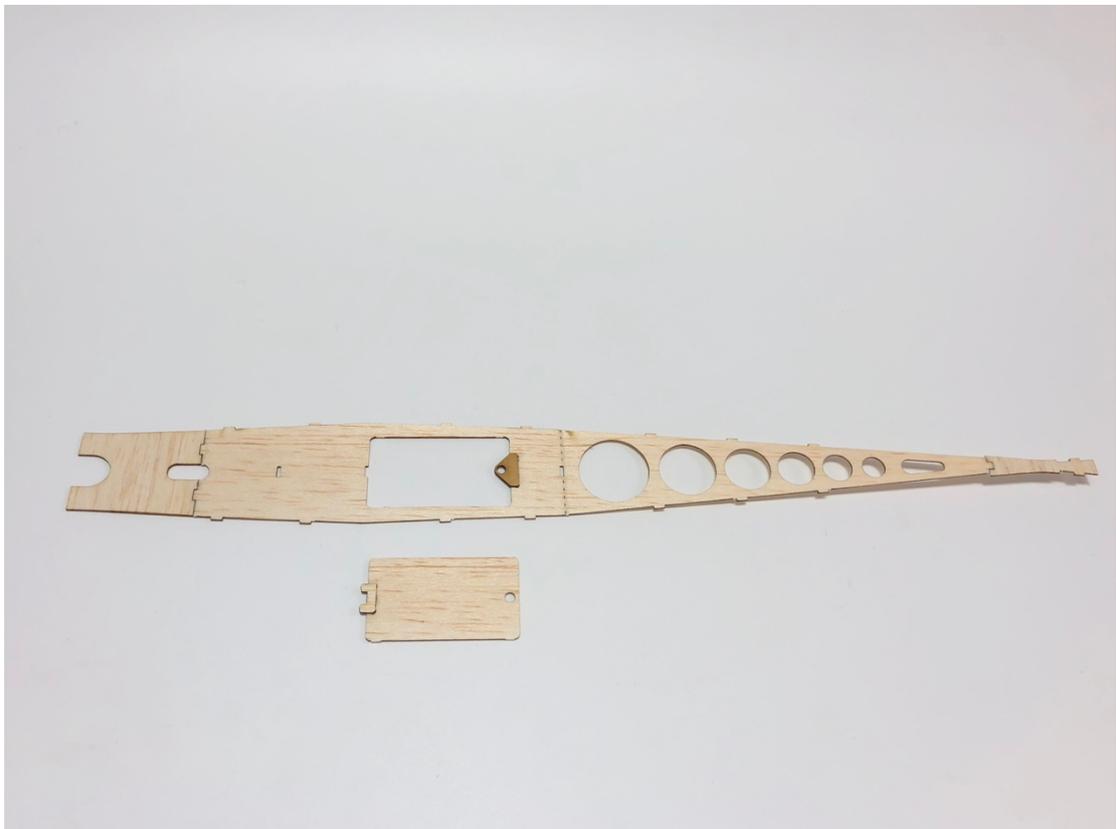

17.

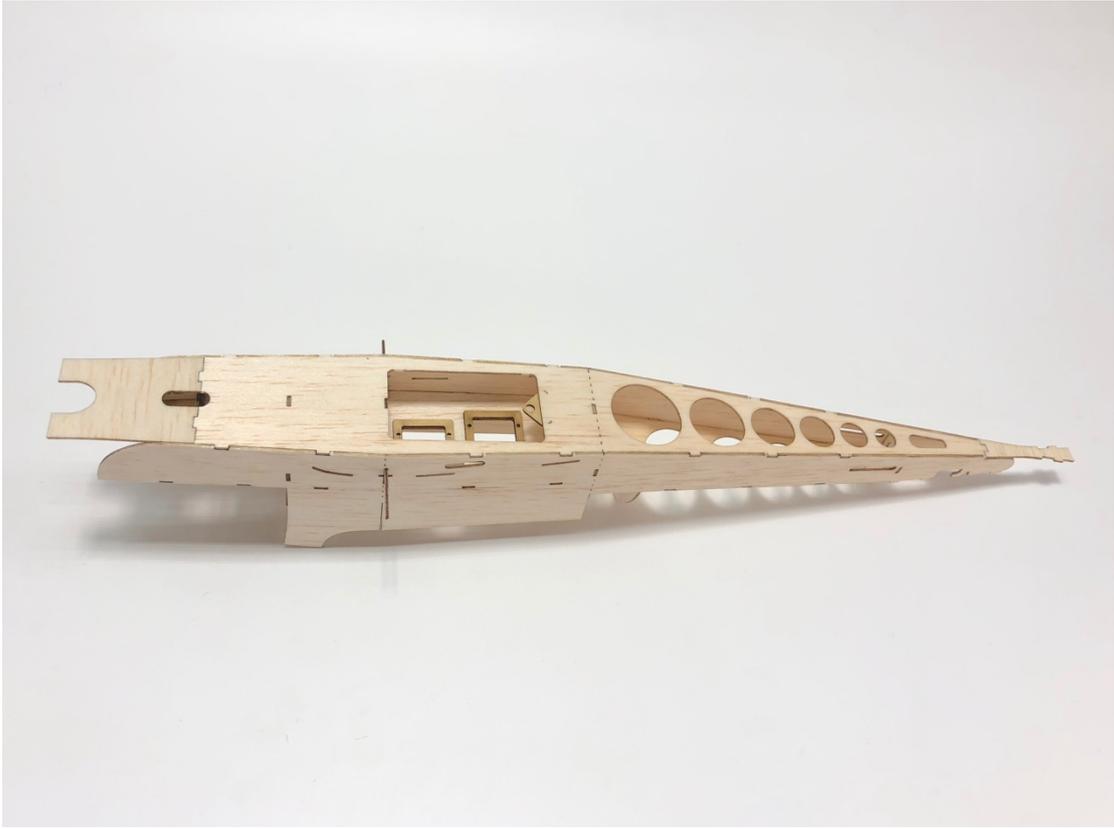

18.




19.



20.




21.

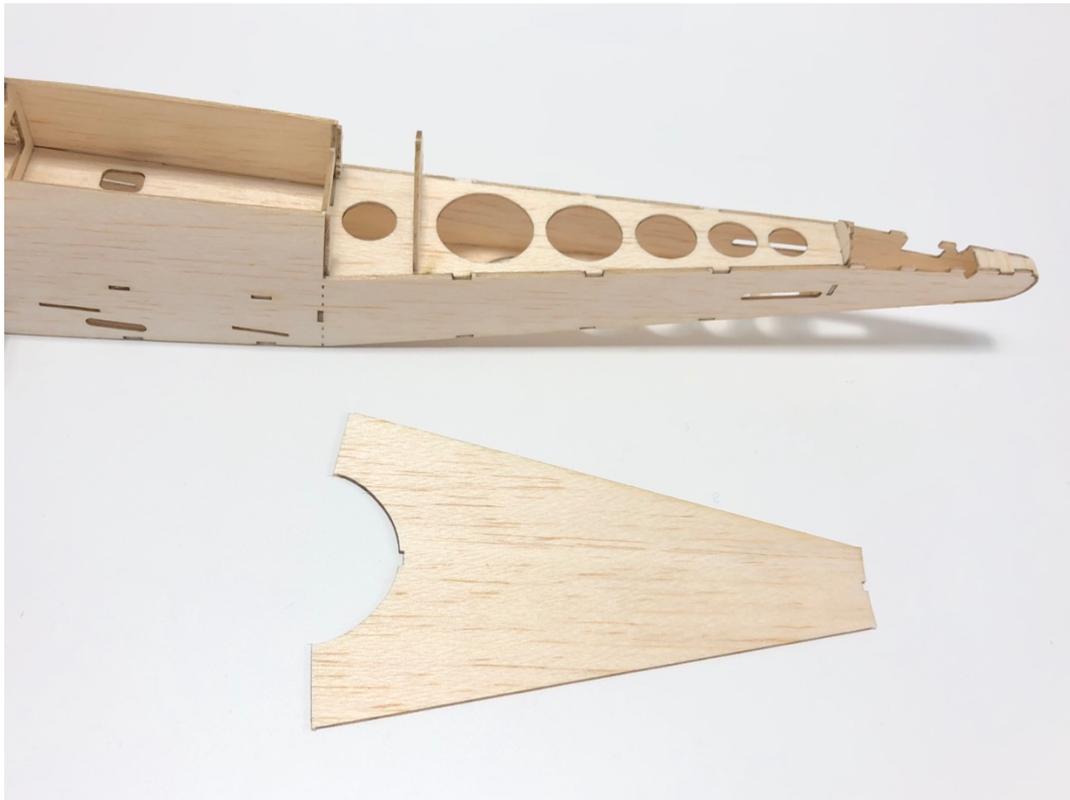


22. When the balsa is too difficult to bend, wipe the outer surface with a wet cloth.



23.

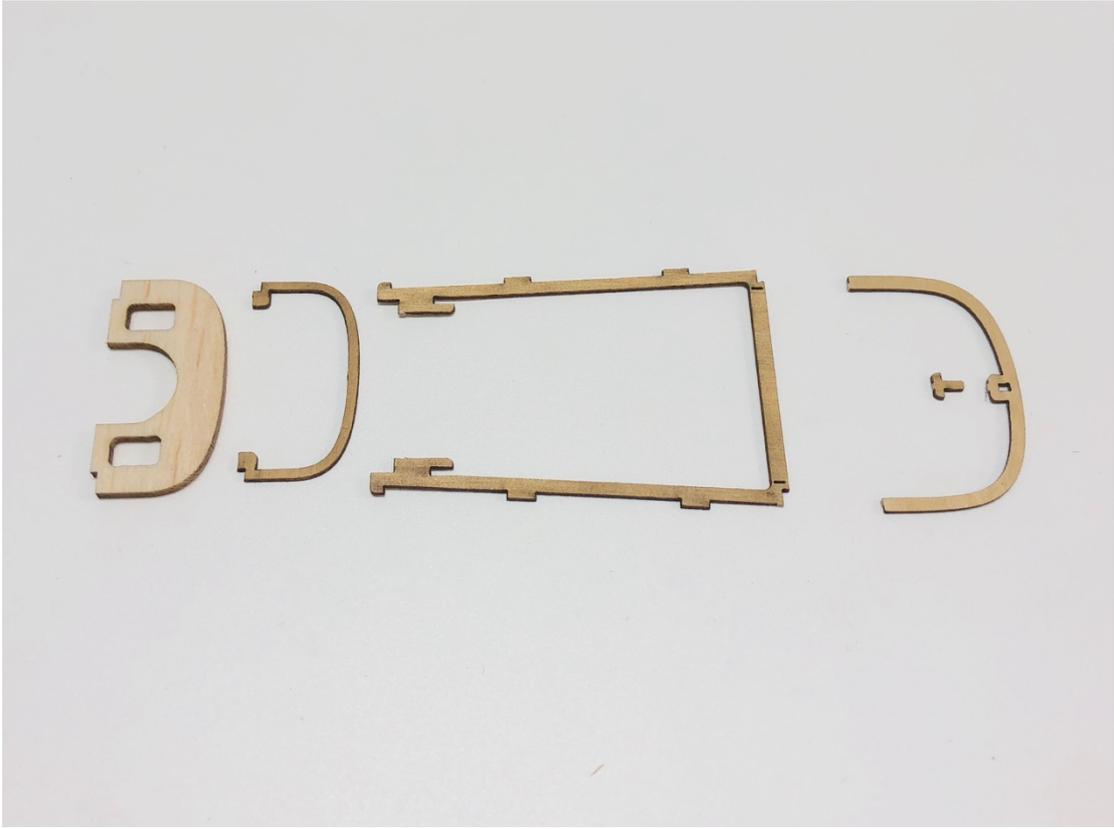

24.

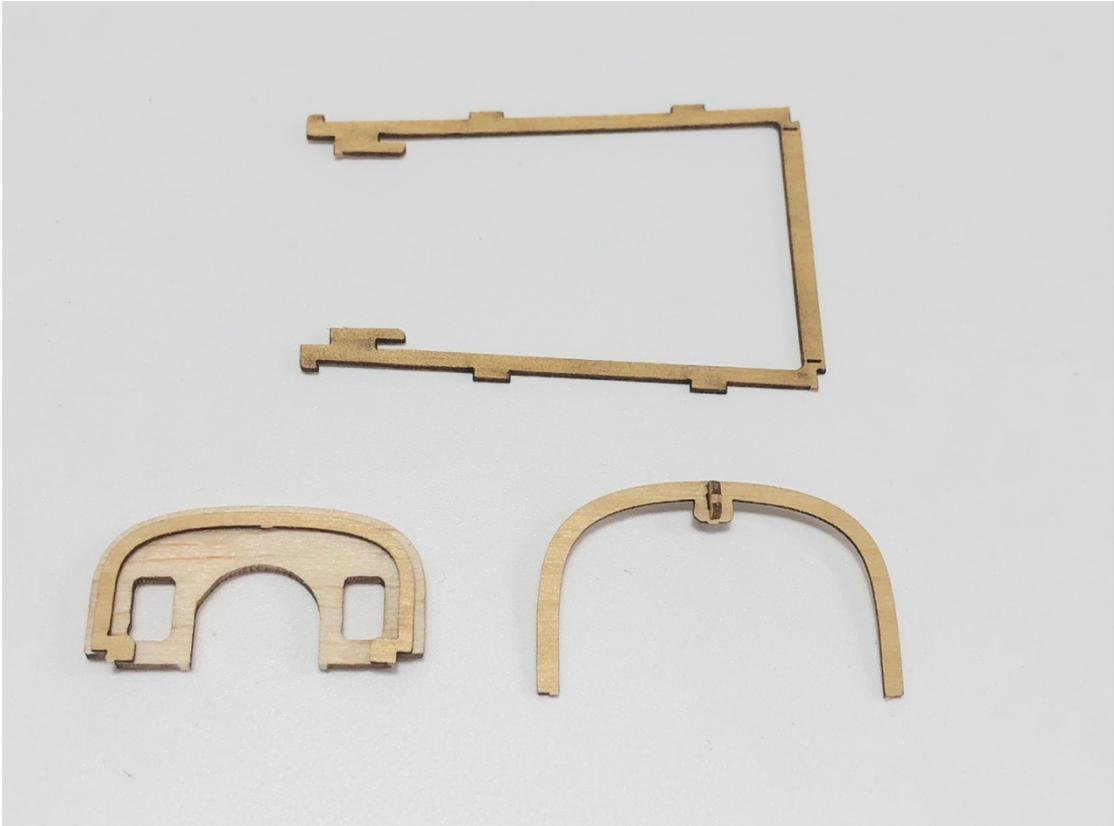

25.




26.




27.



28.

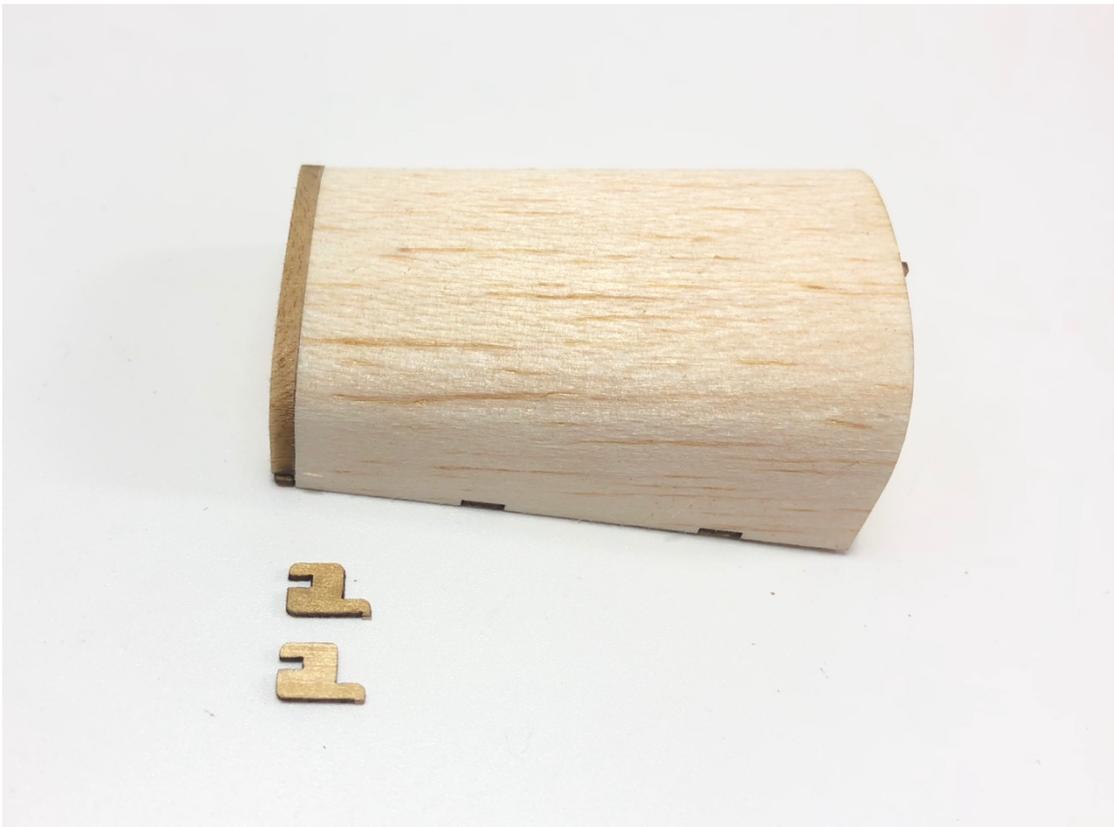

29.

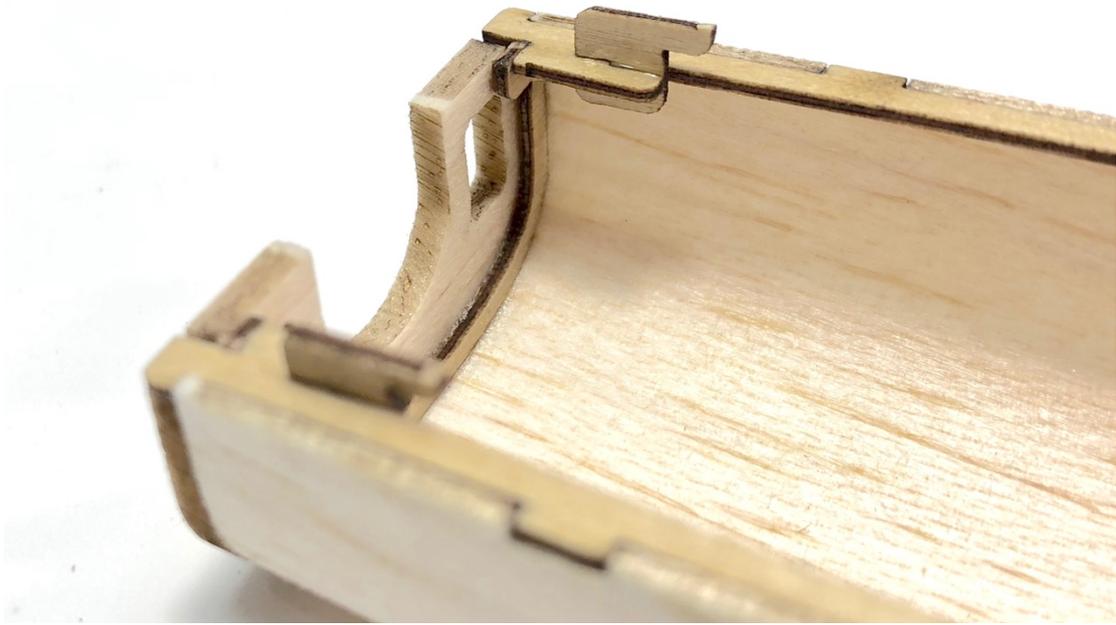

30.




31. Install the hatch (not gluing it).




32. Sand the fuselage.




33.

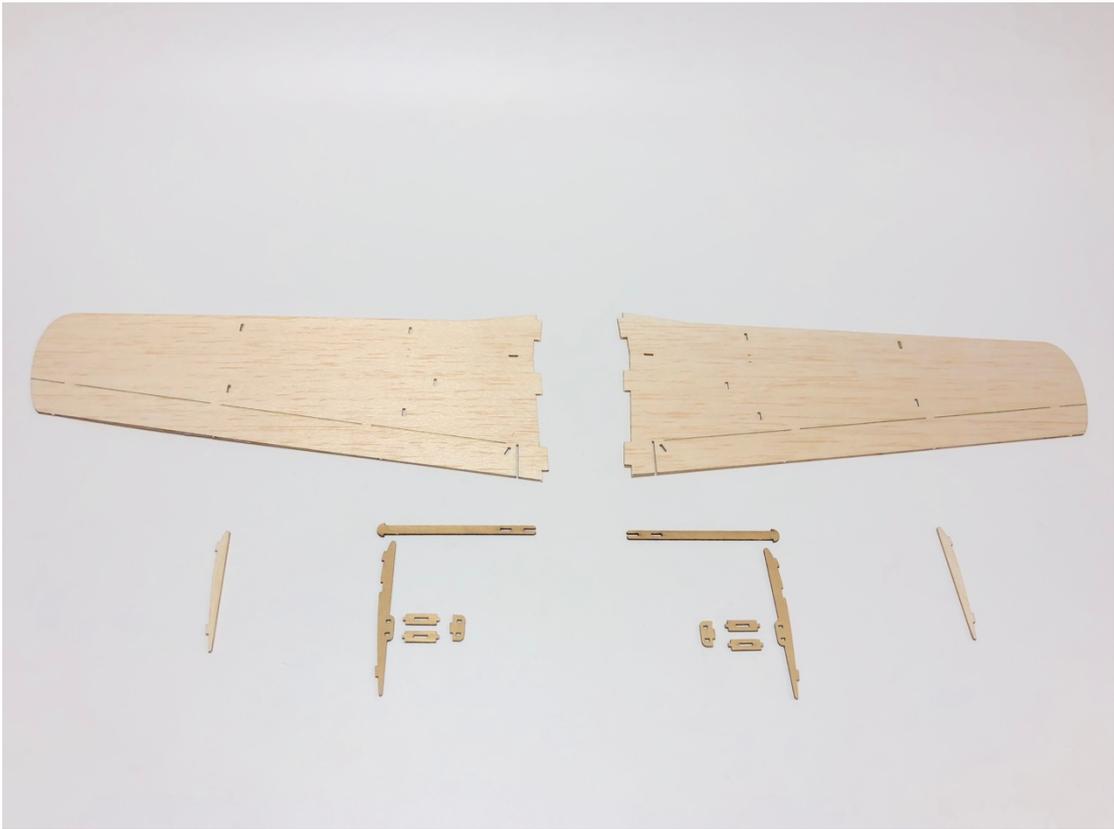


34. Make a hinge with tape.

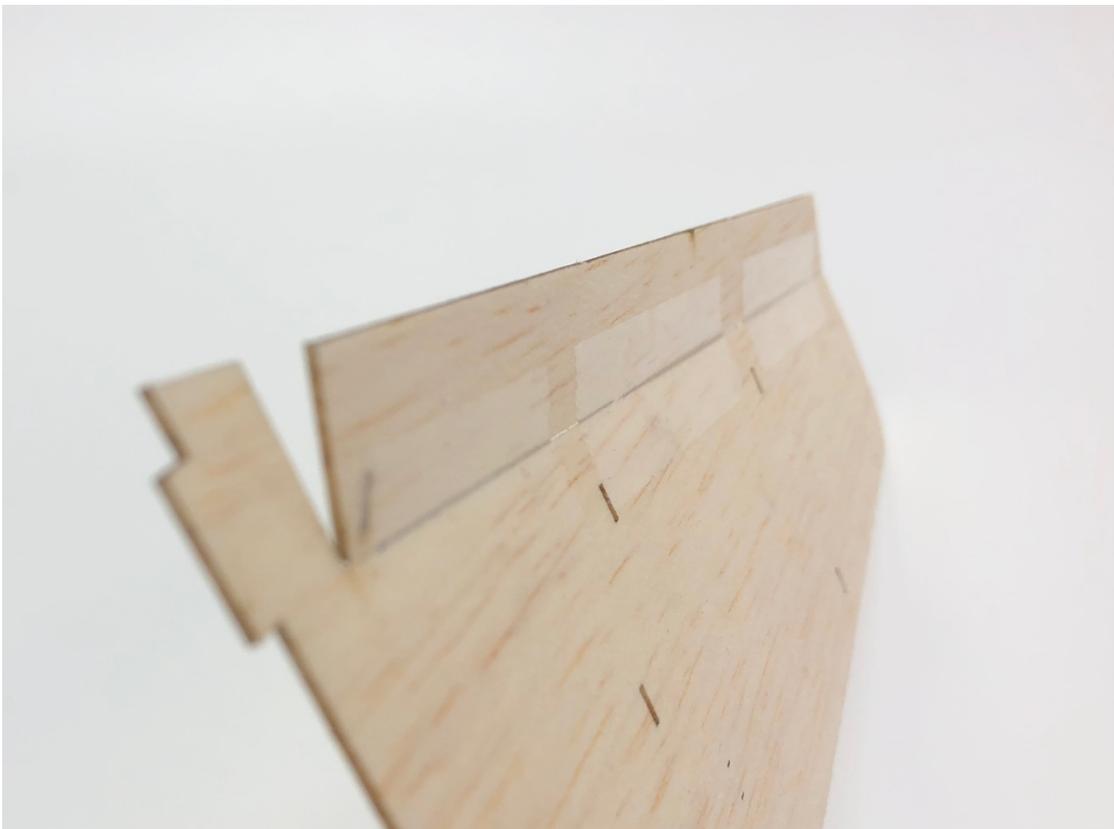


35.

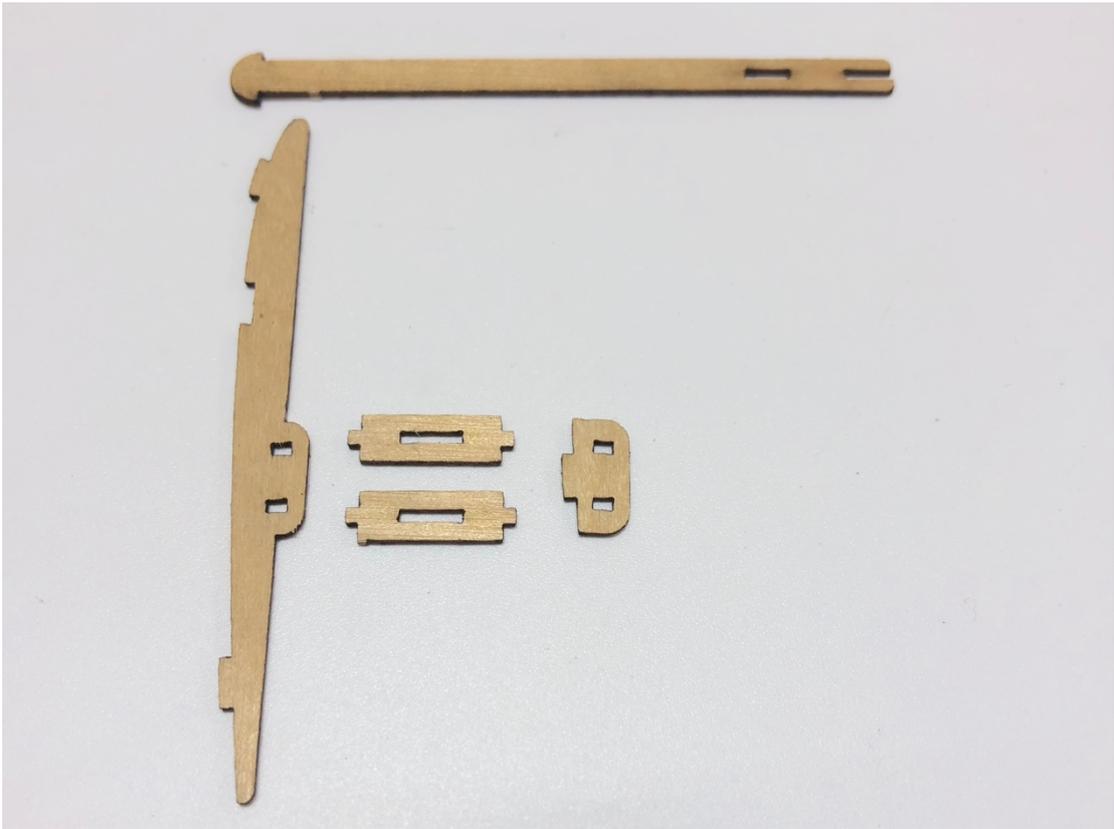

36.

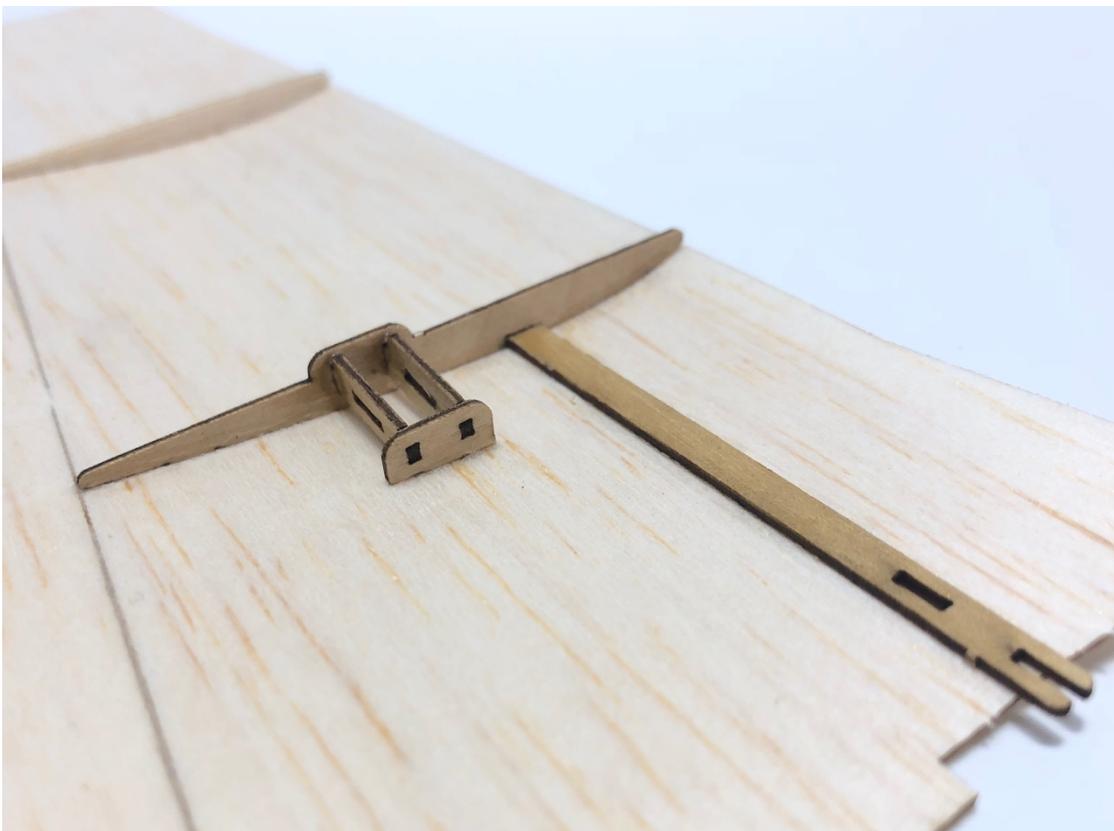

37.

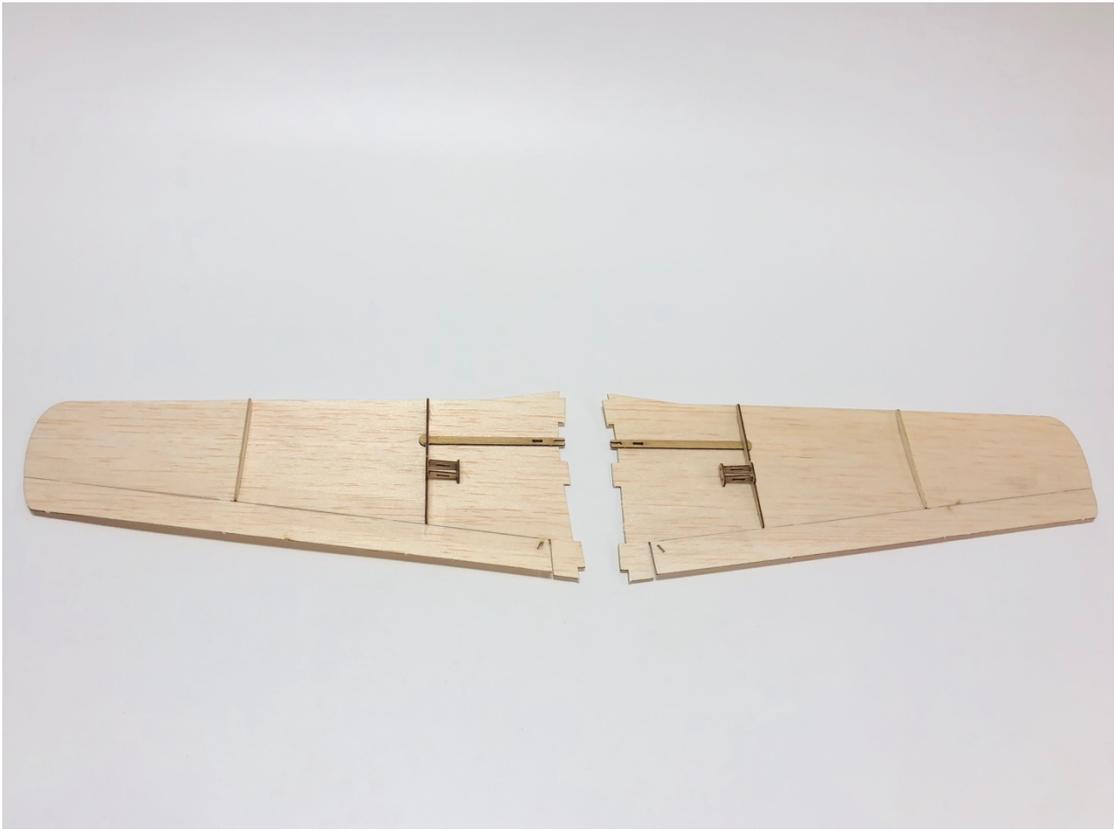

38. Make a hinge with tape.



39. The rudder control horn must be installed on the side of the corresponding fuselage slot.



40.



41.



42.



43.




44.



45.




46.

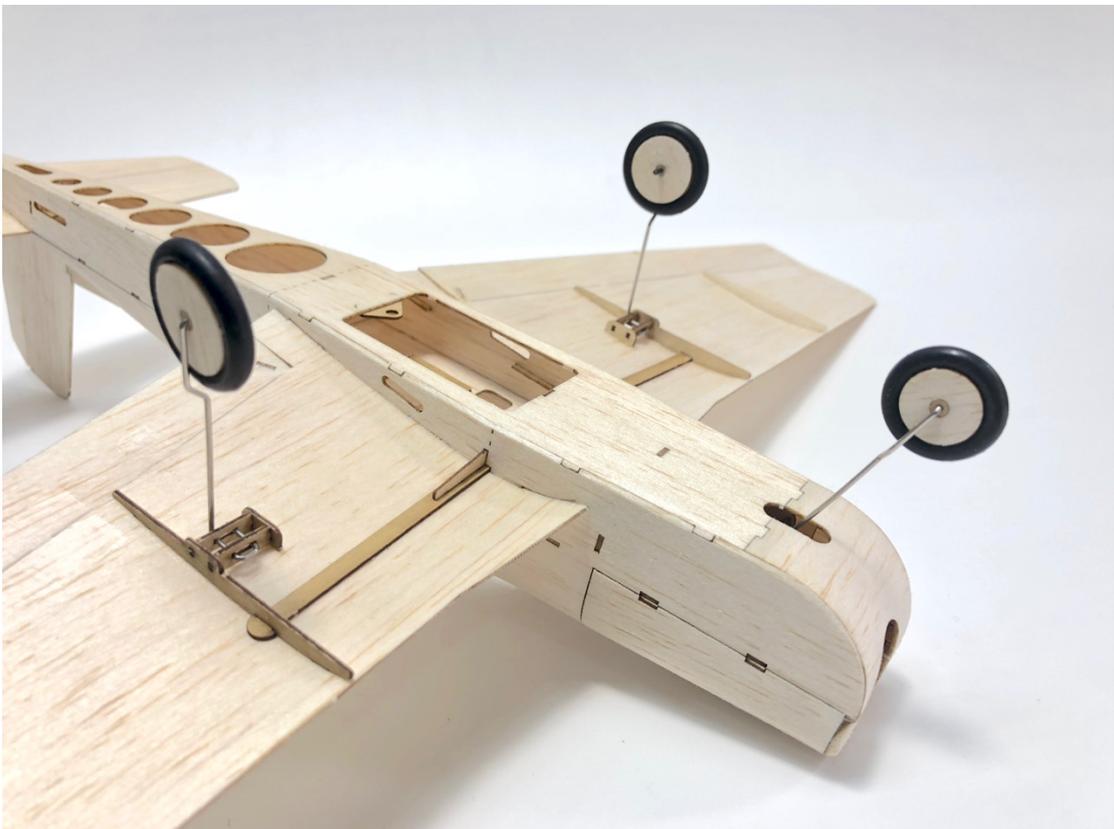


47. Use heat shrinkable tube to hold the wheels.




48.

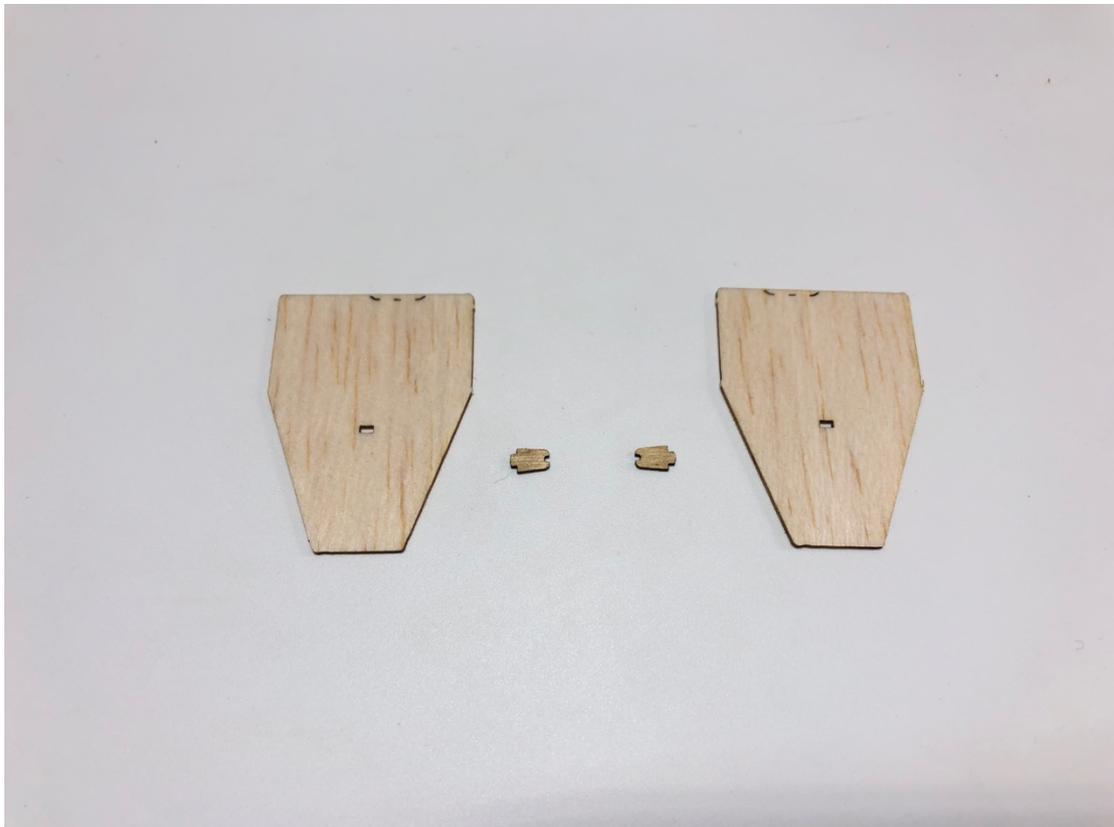


49.

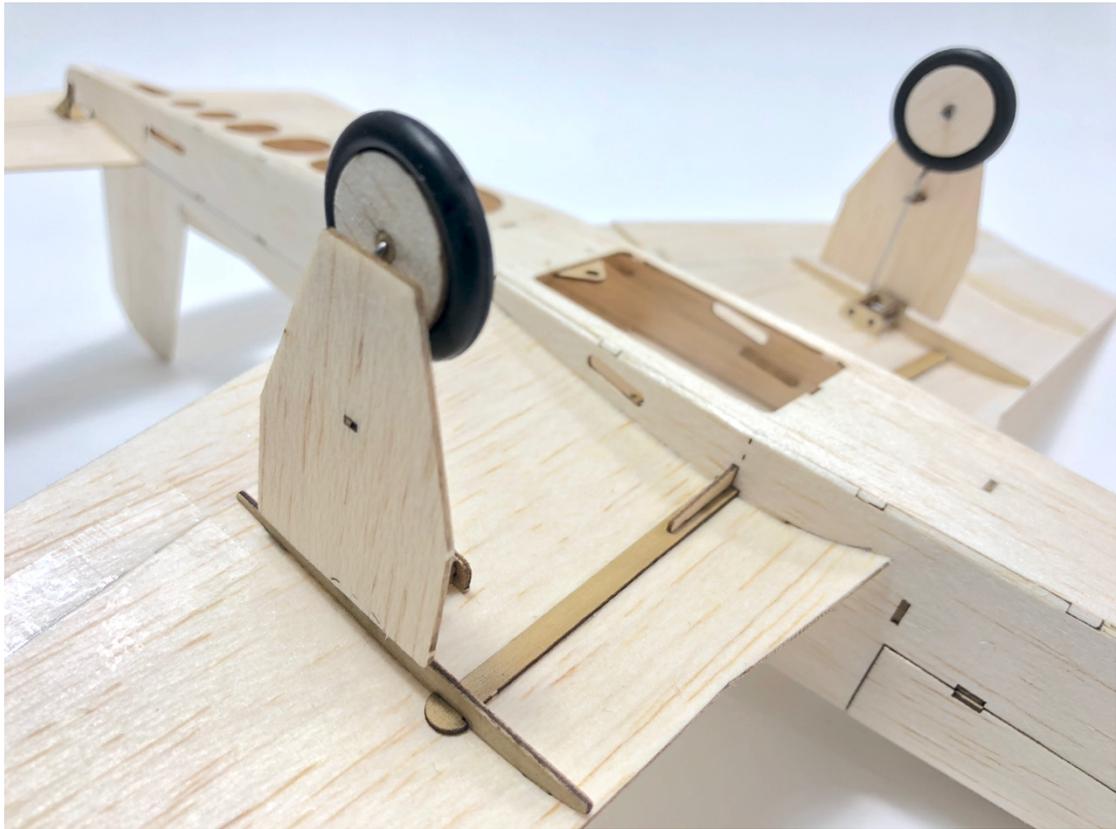

50. Install the magnets.

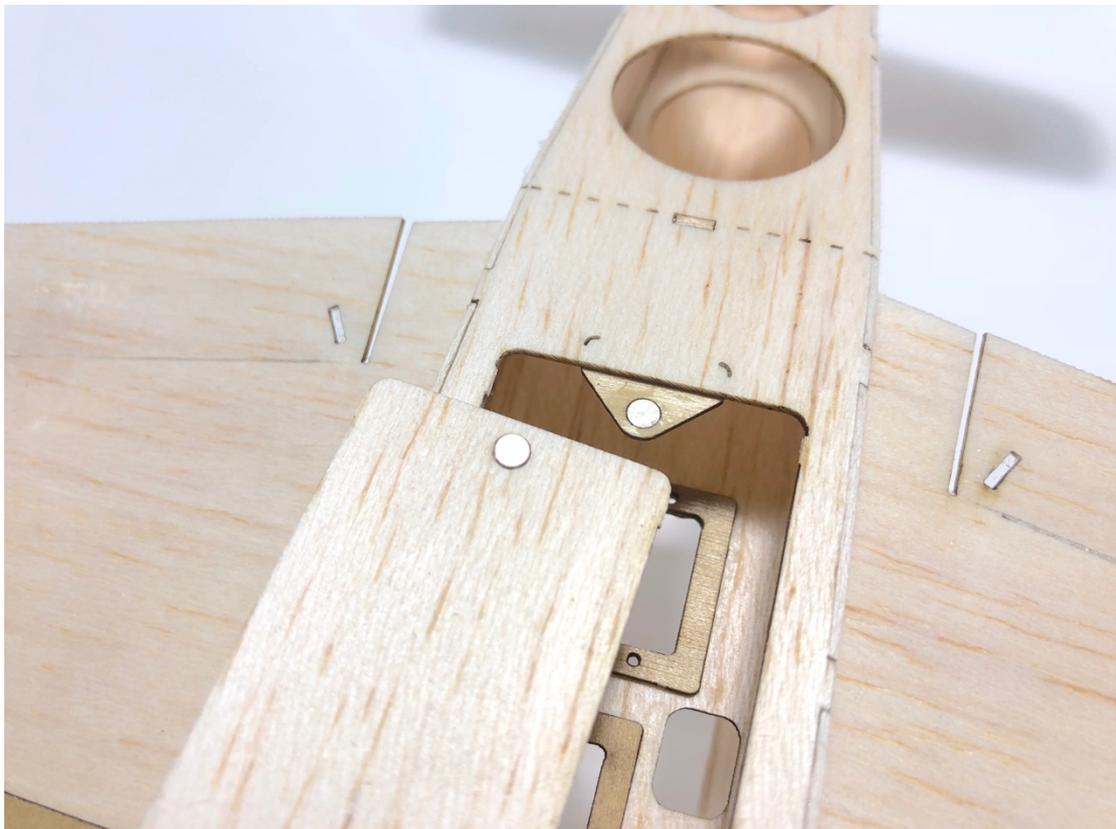

51.

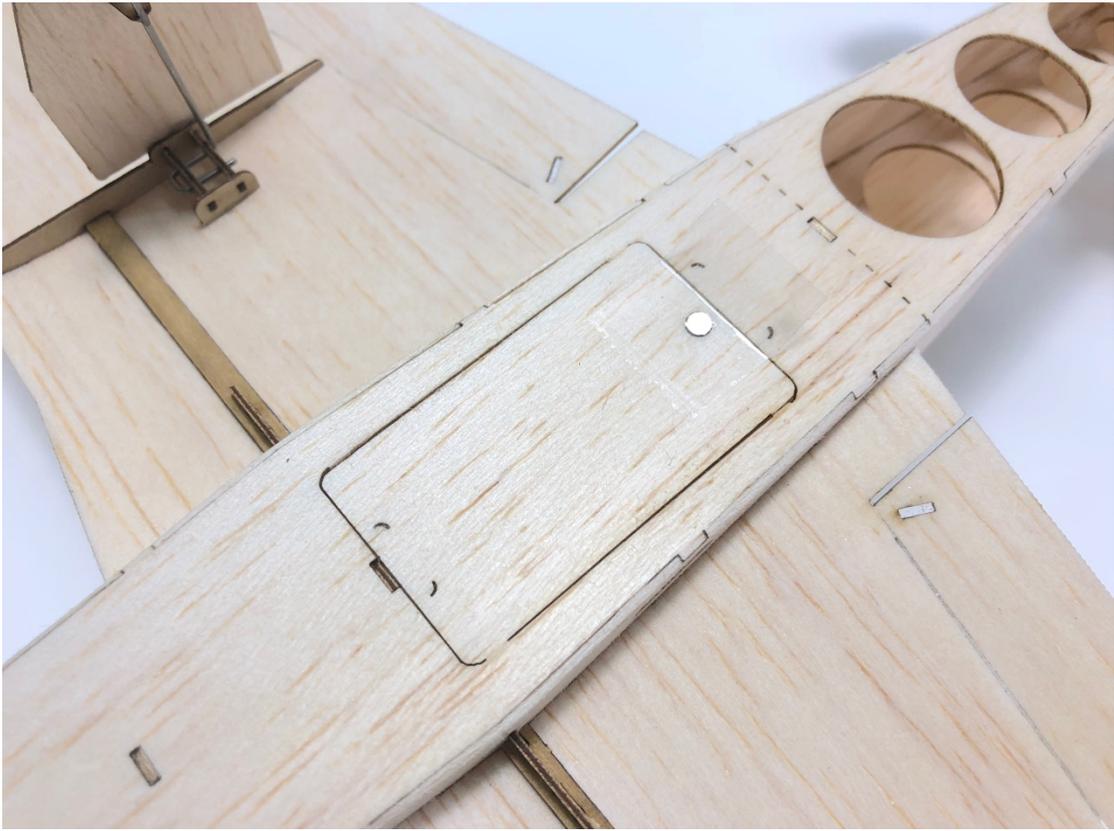


52.



53.




54. Connect the pushrod clips & pushrods with heat shrinkable tube and fix them with glue.

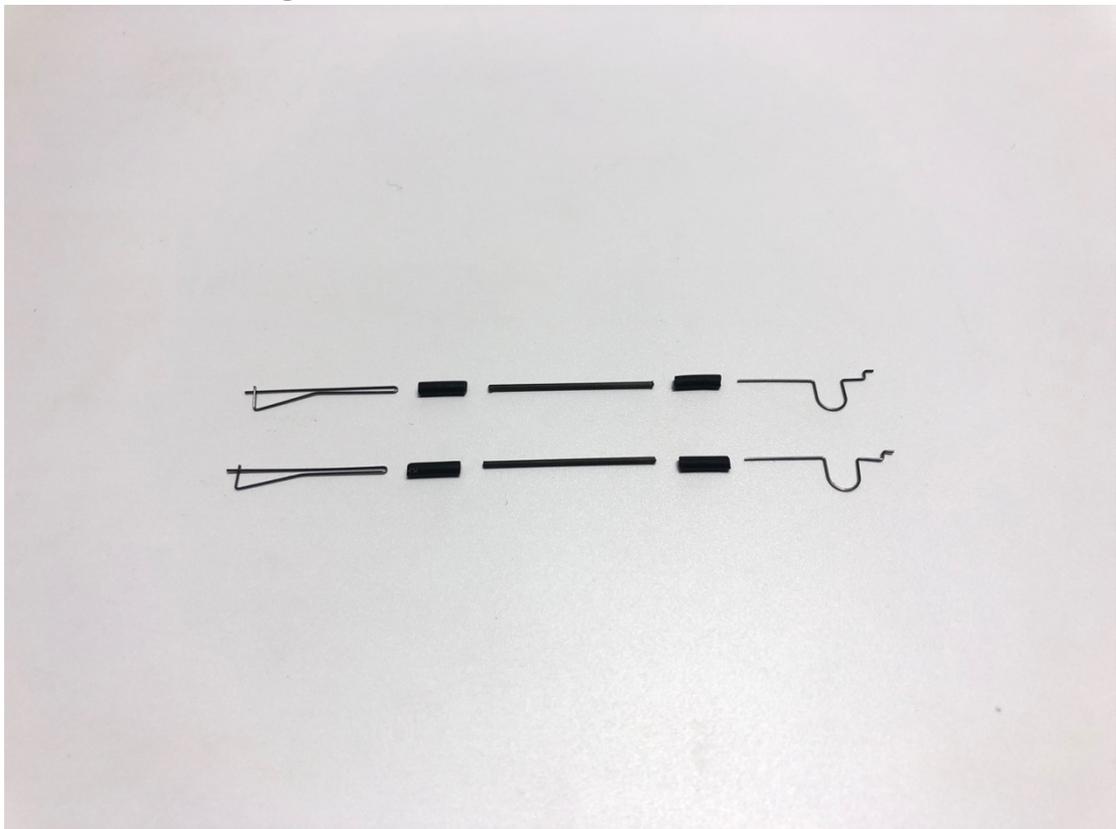

55. Installation of the pushrods.




56. Connect the pushrod clips & pushrods with heat shrinkable tube and fix them with glue.

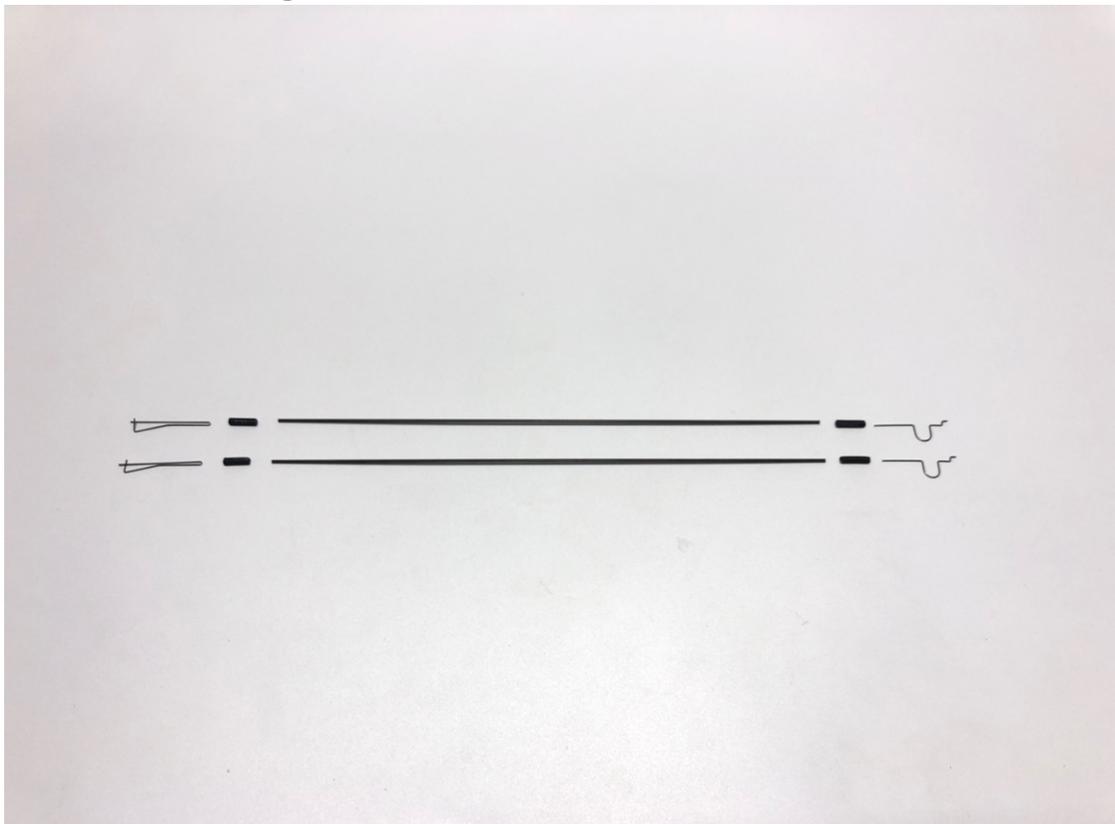

57. Installation of the pushrods.




58.

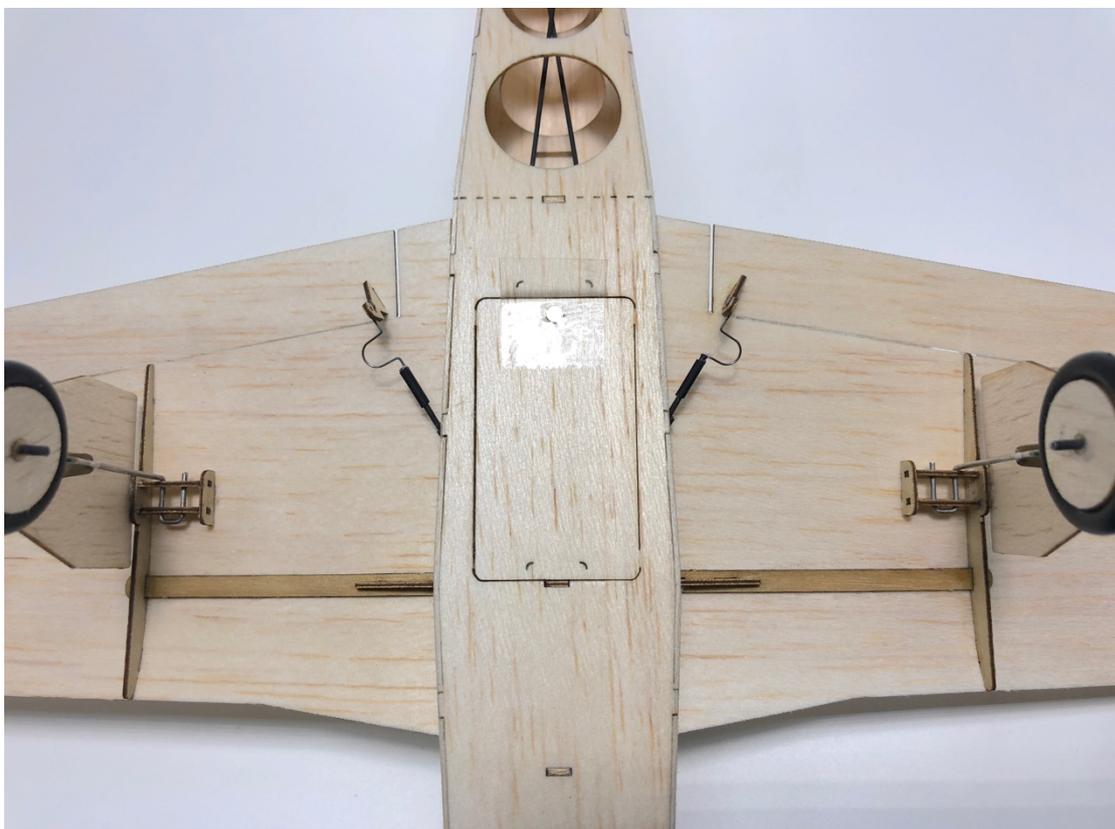


59.



60.

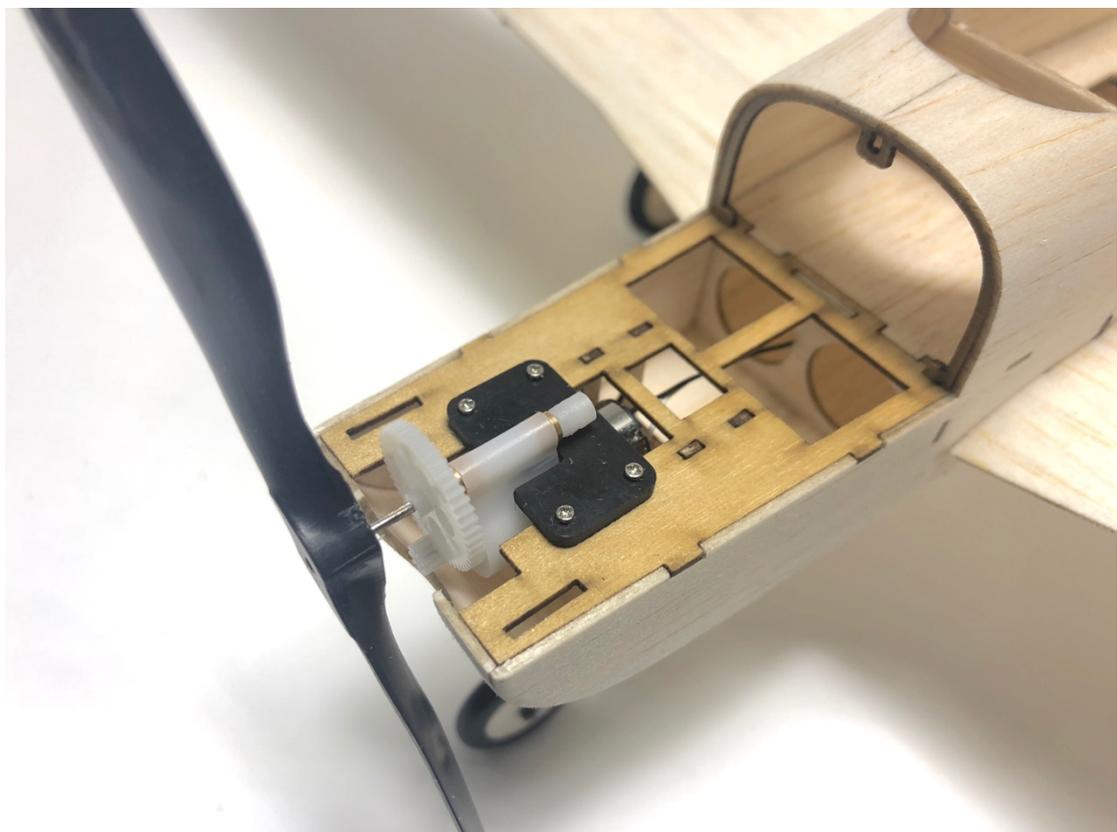


61.

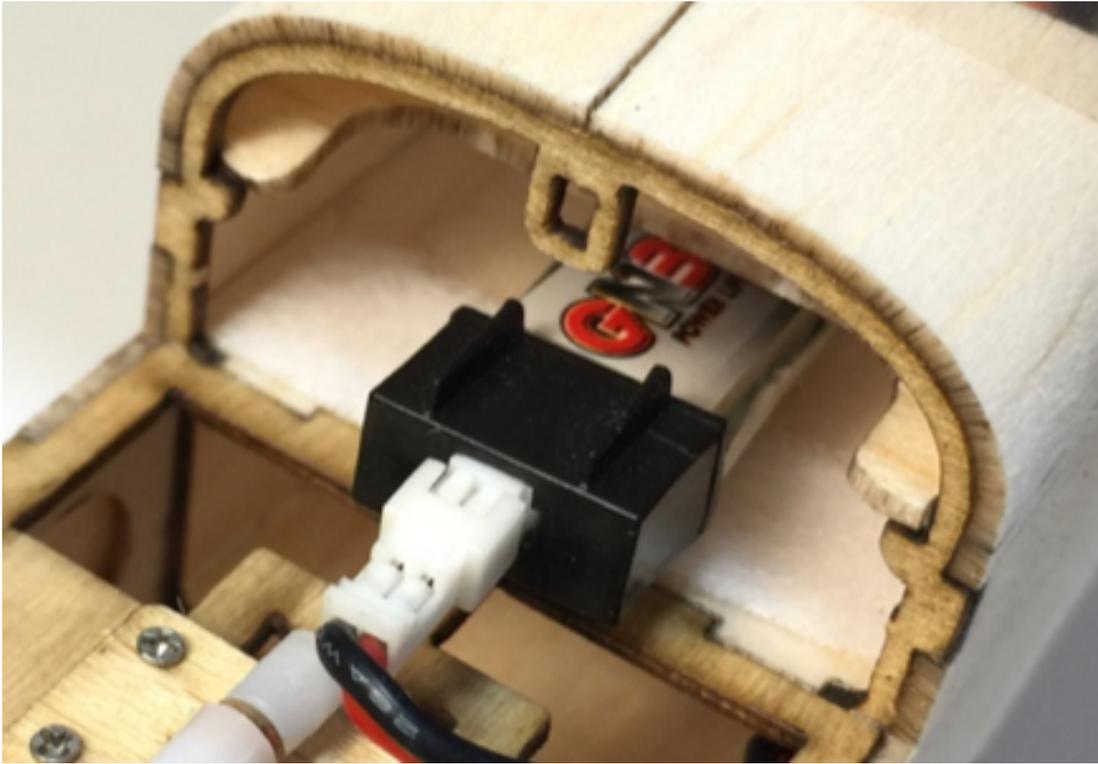

62.



63.

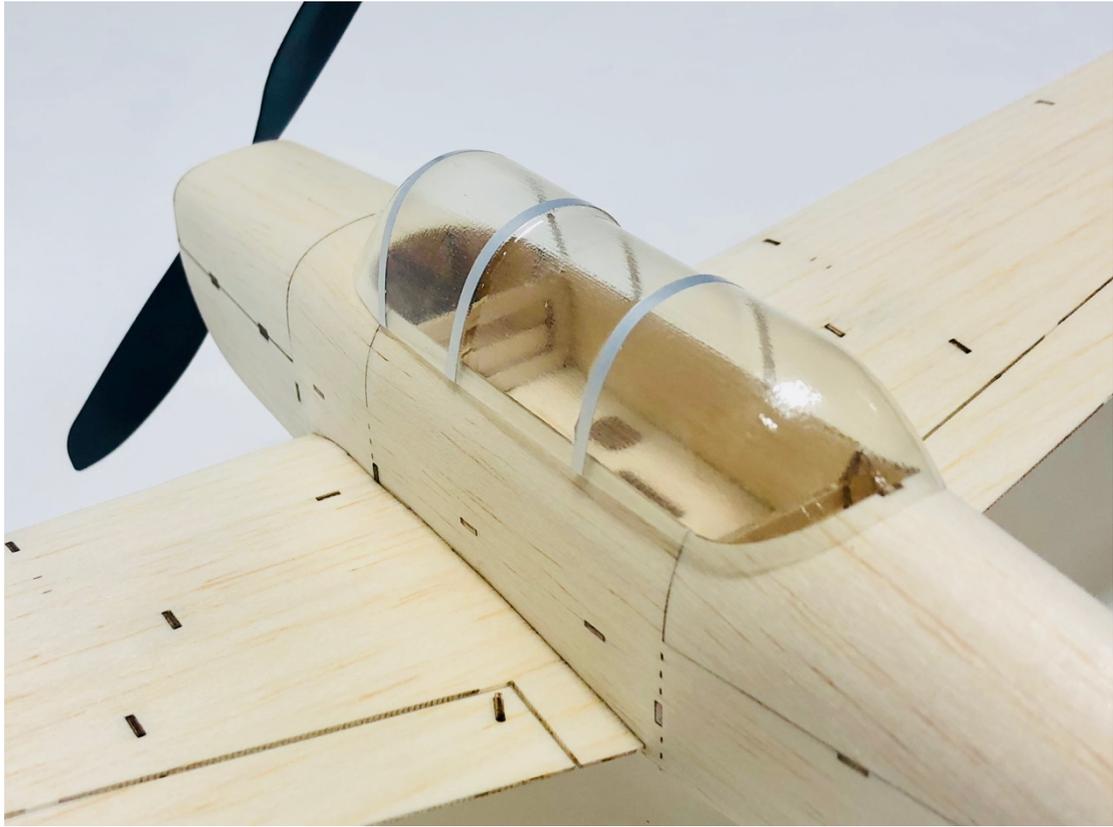

64.



## Completion of assembly

---

### First test flight

- The center of gravity is 10 mm from the leading edge of the wing. Move the battery forward and backward to adjust the center of gravity.
  - The amount of elevator, rudder and aileron is 5 mm for each side. Please adjust the rudder surface to the level before flight test.
- 

Explore the ultimate possibility of airplane kits

MinimumRC.COM