

Minimum RC™


P40 Q-Series Assembly Instructions




Important notification

- 1.The model is supplied with UFO and 502 glue. UFO is for bonding foam parts, and 502 for bonding wood, carbon fiber and metal parts. 502 glue will cause serious corrosion to foam parts.
- 2.Please wait for the glue to dry and solidify in each installation step before the next installation.
- 3.Please avoid using flame to heat the heat shrinkable tube on the model. Electric iron shall be used for heating.
- 4.Please use razor blade to remove the parts from the plate. Do not tear the parts by force.


1. Fuselage internals.

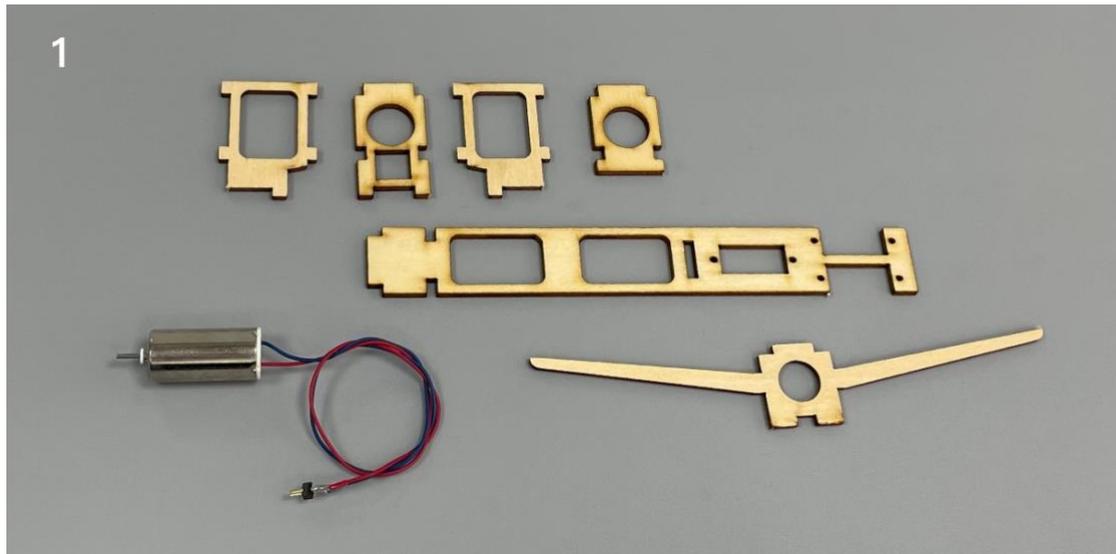

2. Bond the inner structure of the fuselage with 502 glue.

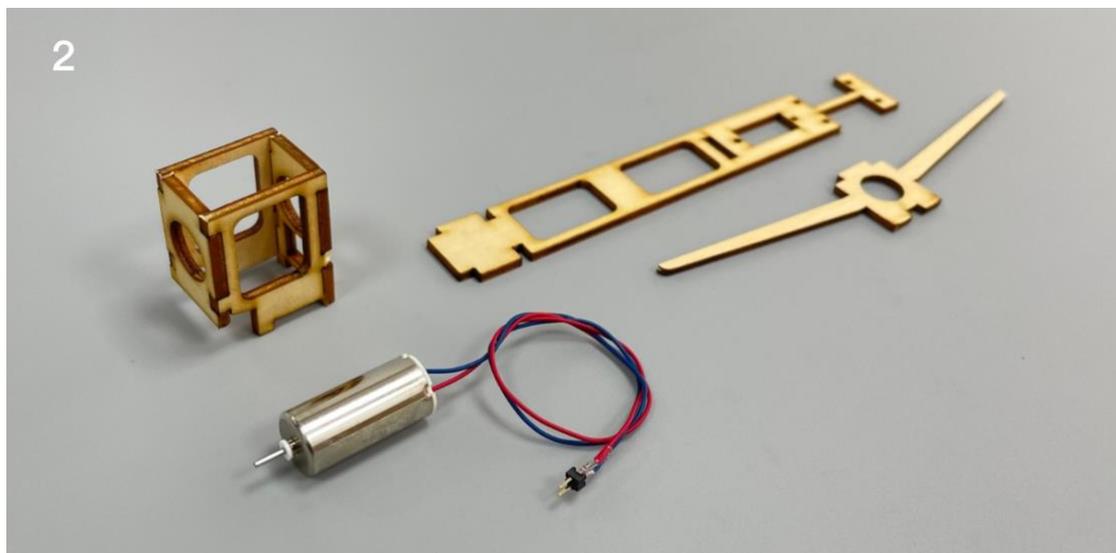


3. Bond the inner structure of the fuselage with 502 glue.

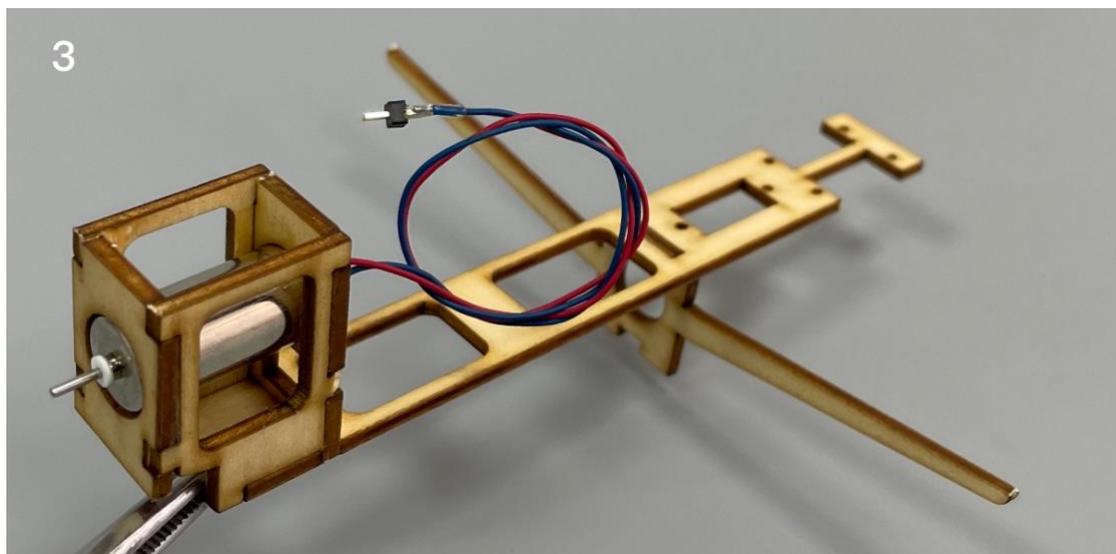


4. Connect the servos to a powered receiver. Bind the receiver with your transmitter to make the servos arms return to their neutral point. Test whether the servos are working correctly, and install the servo arms according to the position shown in the picture.


Note: Please make sure that the servos have been tested and installed in strict accordance with the following picture. After assembling the model, it will be not able to adjust.

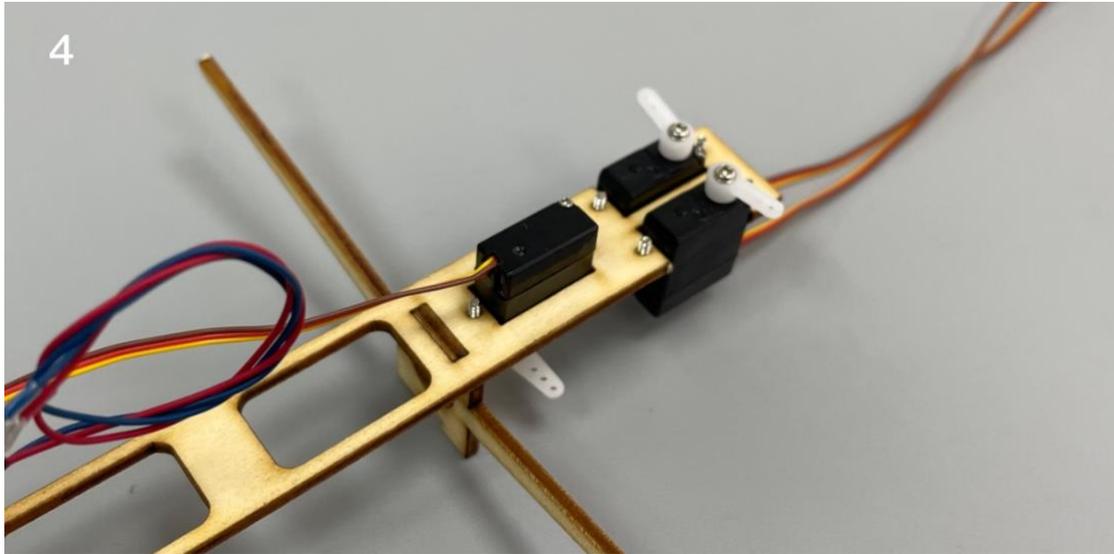


5. (bottom view) The three servos are installed and fixed under the plywood board.

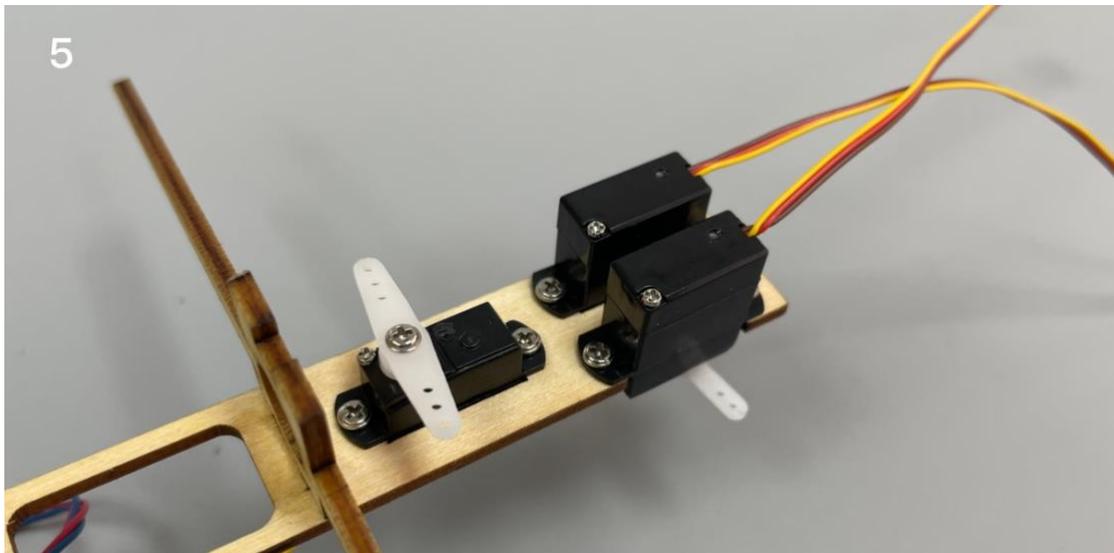


6. Connect the receiver to the motor, install the propeller and test whether the rotation direction of the motor is correct. Test whether the corresponding relationship between the three servos and the transmitter channel is correct (as shown in the picture).
After the test, fix the receiver with Velcro and tie the cable.

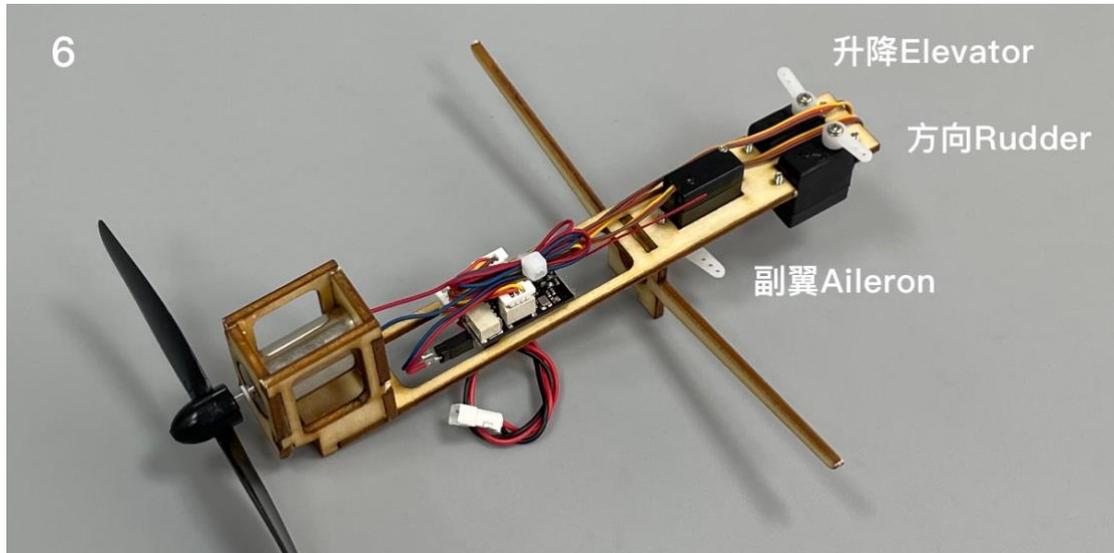

7. Install magnet base & magnet.

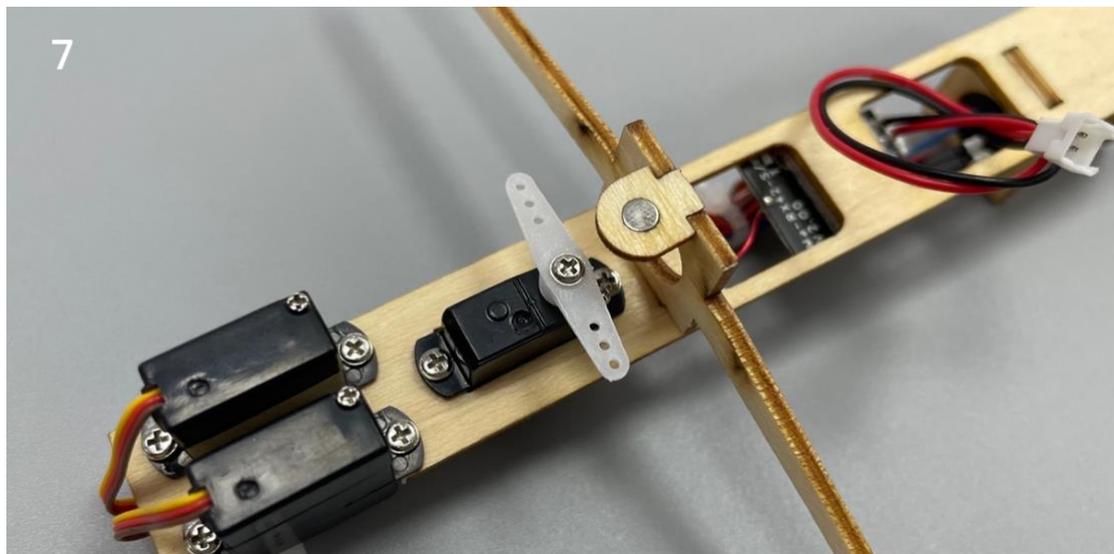


8. Align the scribed line on the inner side of the fuselage and fix the wooden structure with glue.

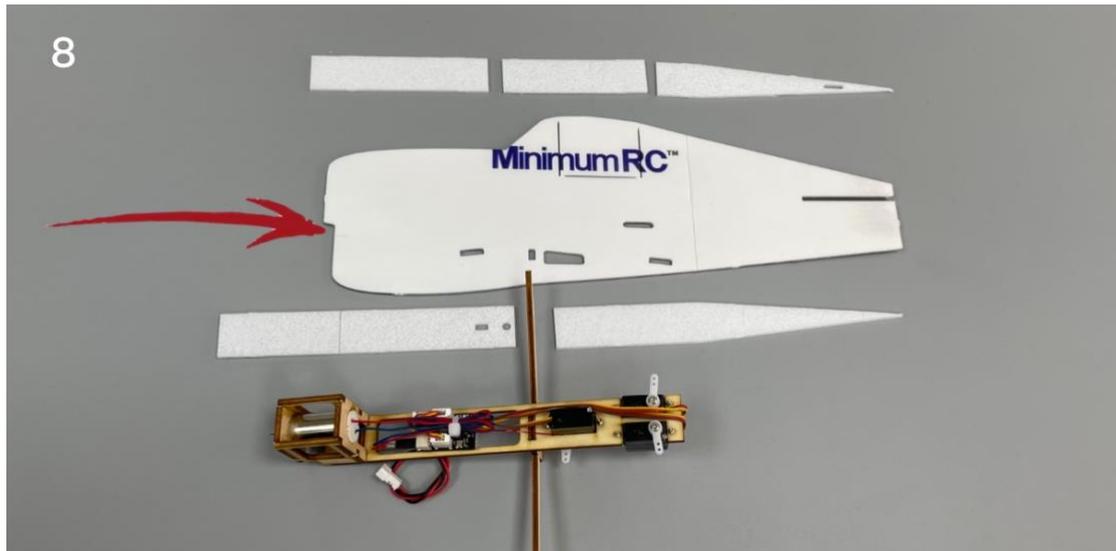


9. Align the scribed line on the inner side of the fuselage and fix the wooden structure with glue.



10. Note: the position shown in the picture is the battery cover plate that can be opened. No glue shall be applied to the area marked by the yellow line.

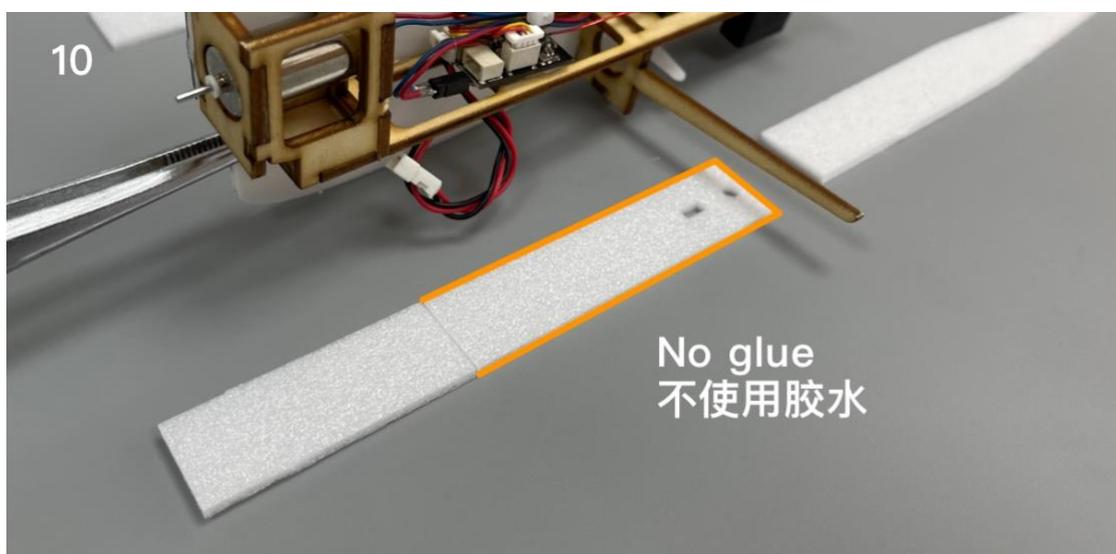

11. Fix the top and bottom strip of the fuselage with glue.

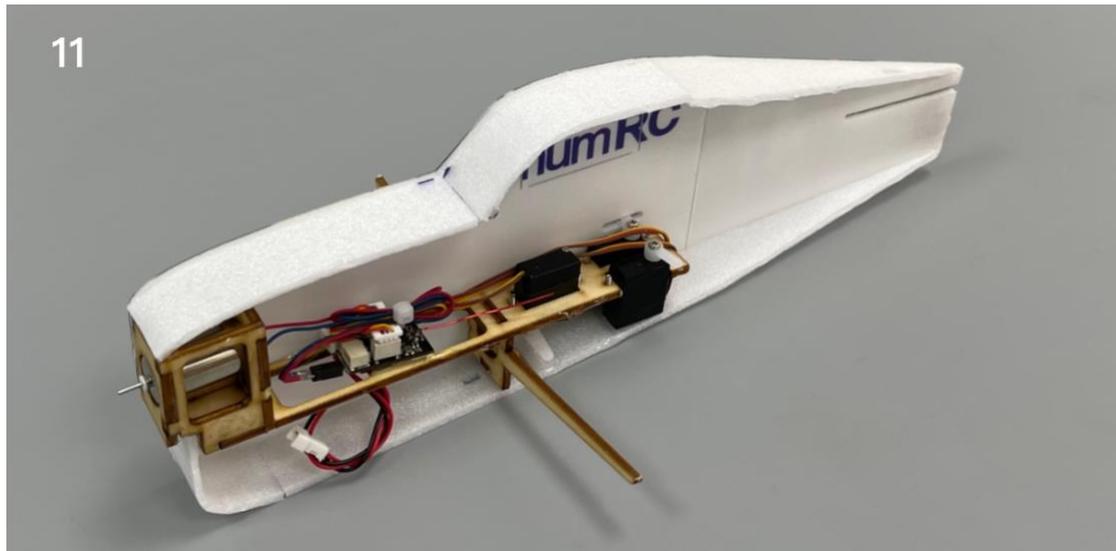


12. Combine the fuselage.



13. Paste the fuselage sticker.




14. Fix the battery cover magnet with glue and cover it with stickers.

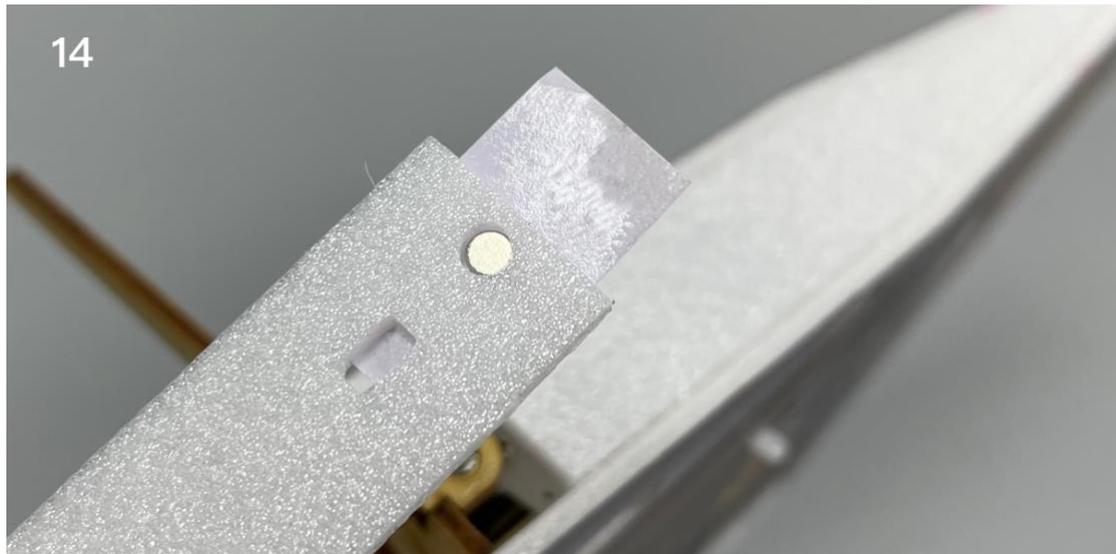


15. Install the propeller and spinner.




16. Use the end of a screw driver to score through the aileron half-cut line of the wing surface.

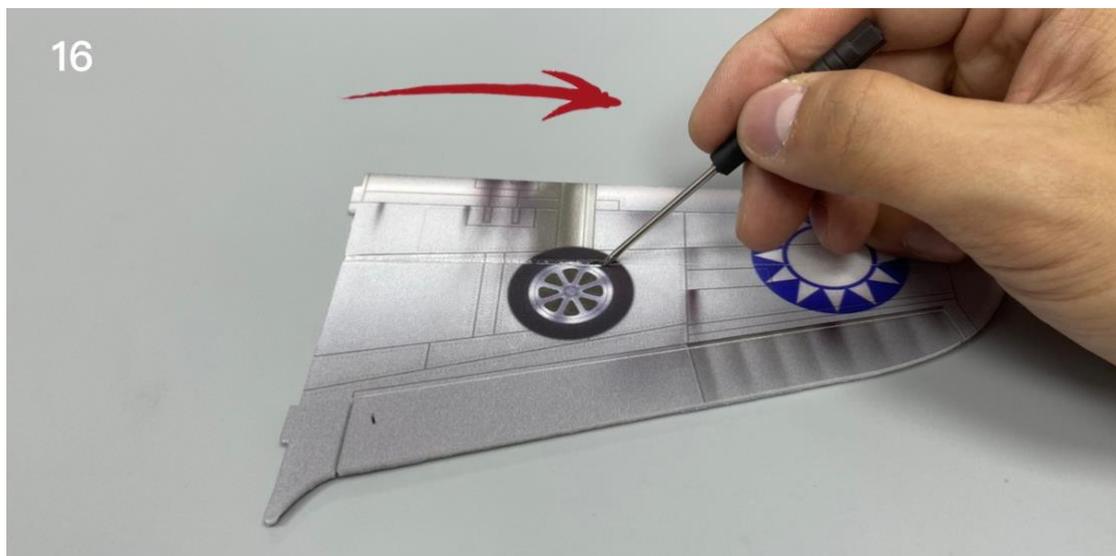


17. Use the end of a screw driver to score through the aileron half-cut line of the aileron.

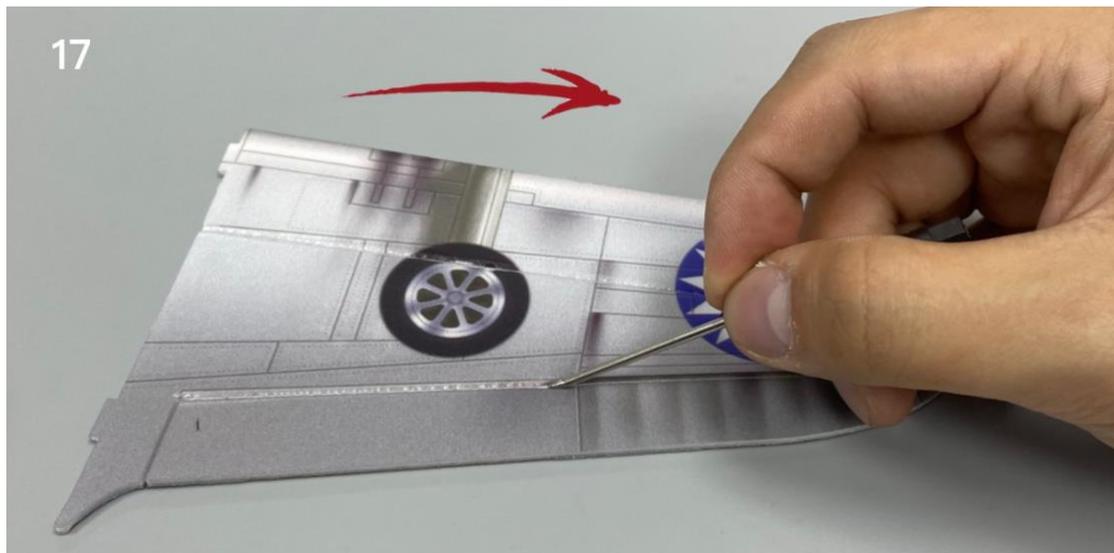


18. Use the end of a screw driver to score through the aileron half-cut line of the horizontal tail.

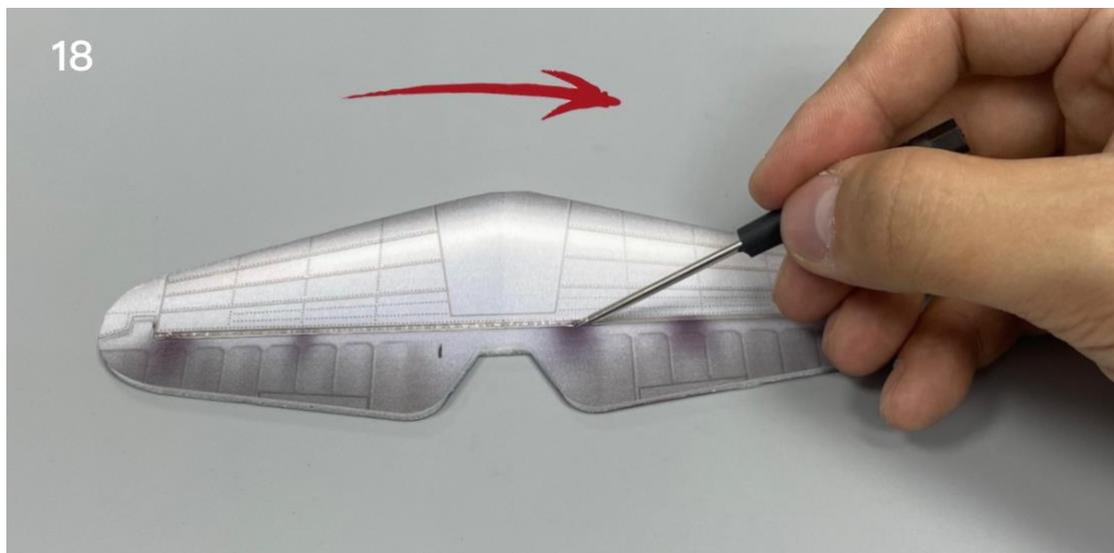

19. Use the end of a screw driver to score through the aileron half-cut line of the vertical tail.

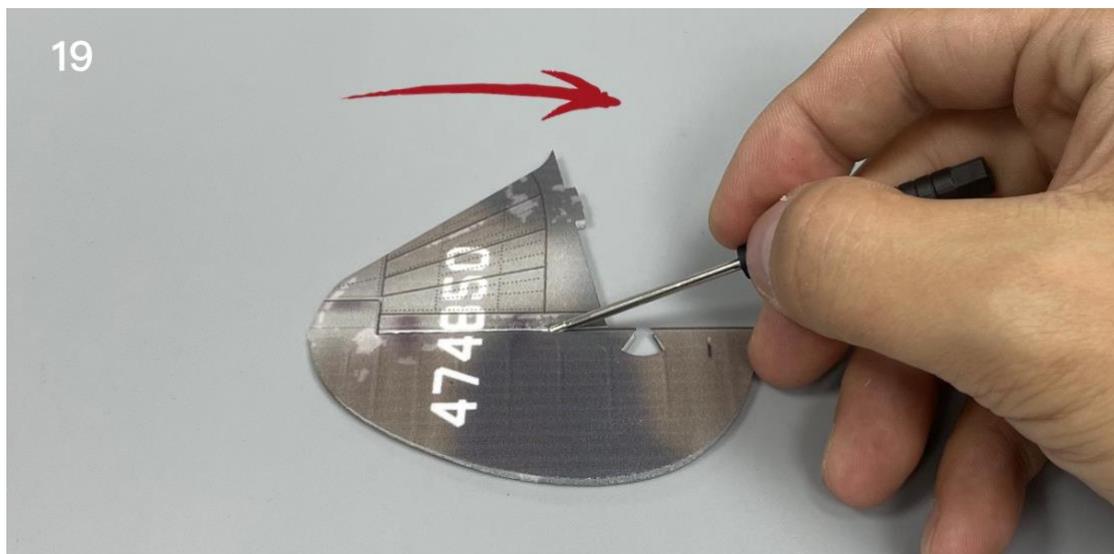


20. Install the tails.

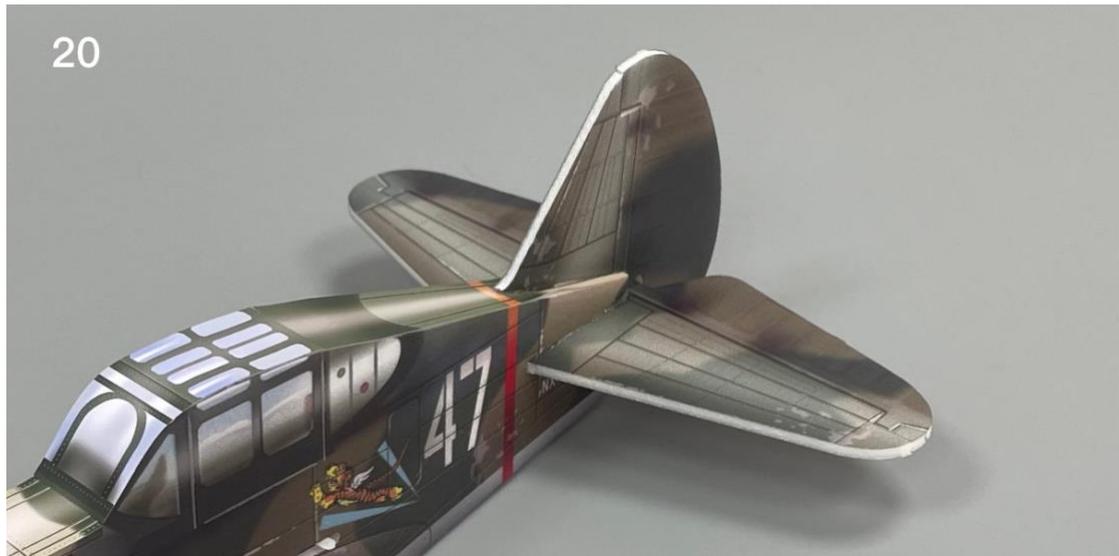

21. Attach the wings to the fuselage.




22. Insert the copper axle core into the center of the wood wheel core.

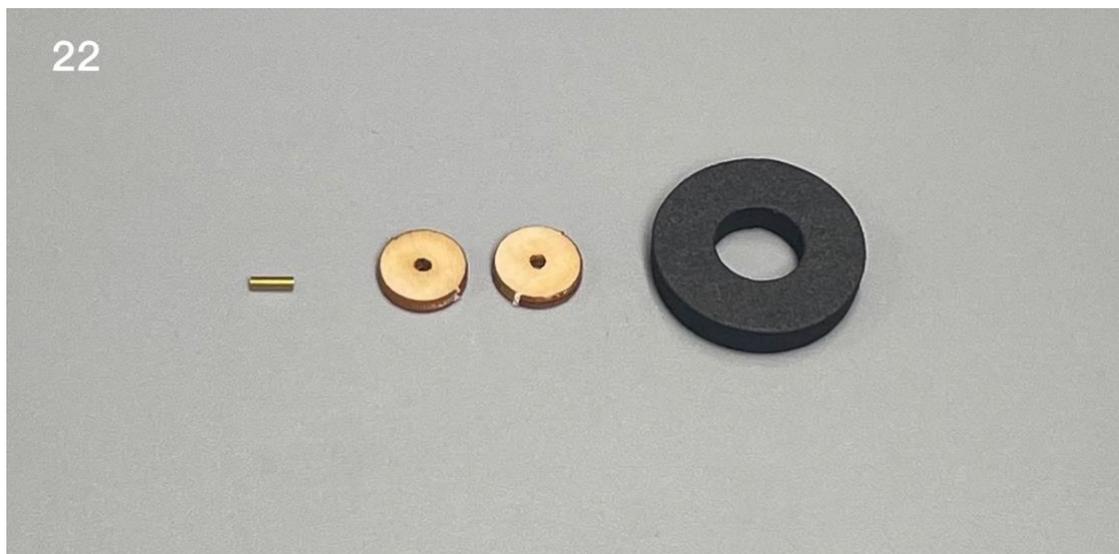


23. Glue the tires.




24. Glue the tires.

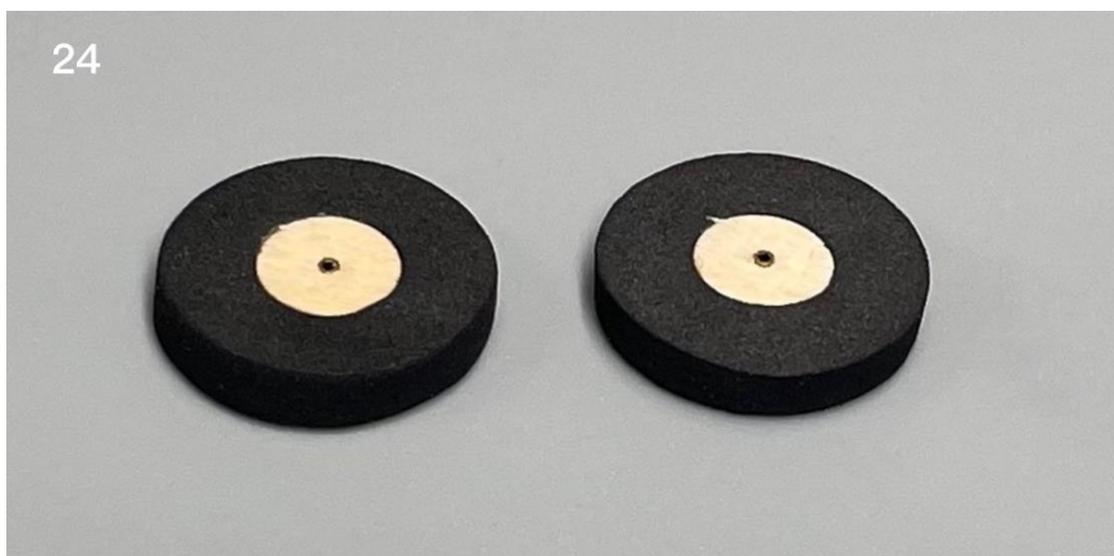


25. Bend the steel wire with pointed nose pliers as shown in the picture.

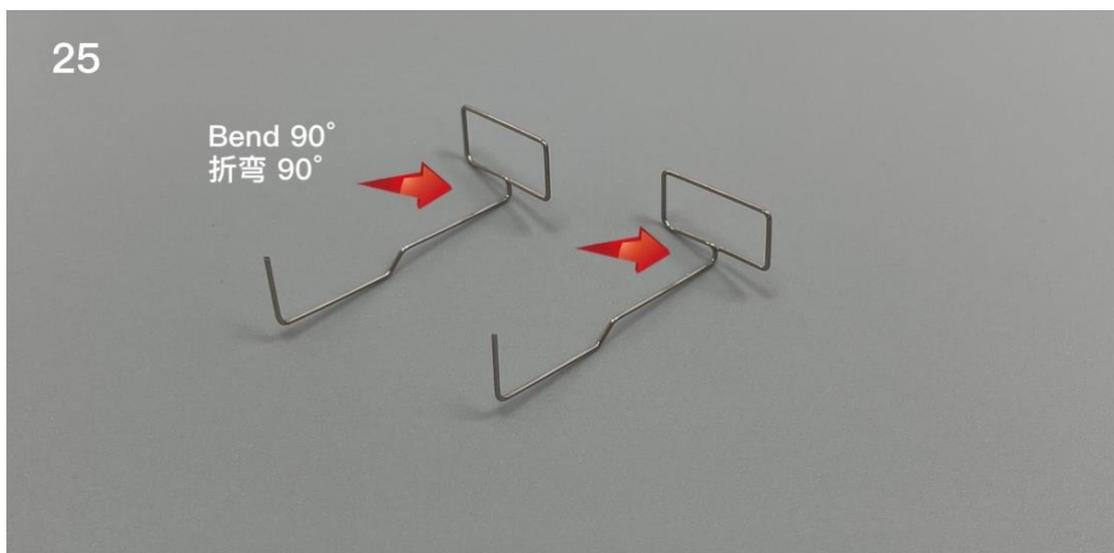

26. Bend the outer end of the steel wire with pointed nose pliers.

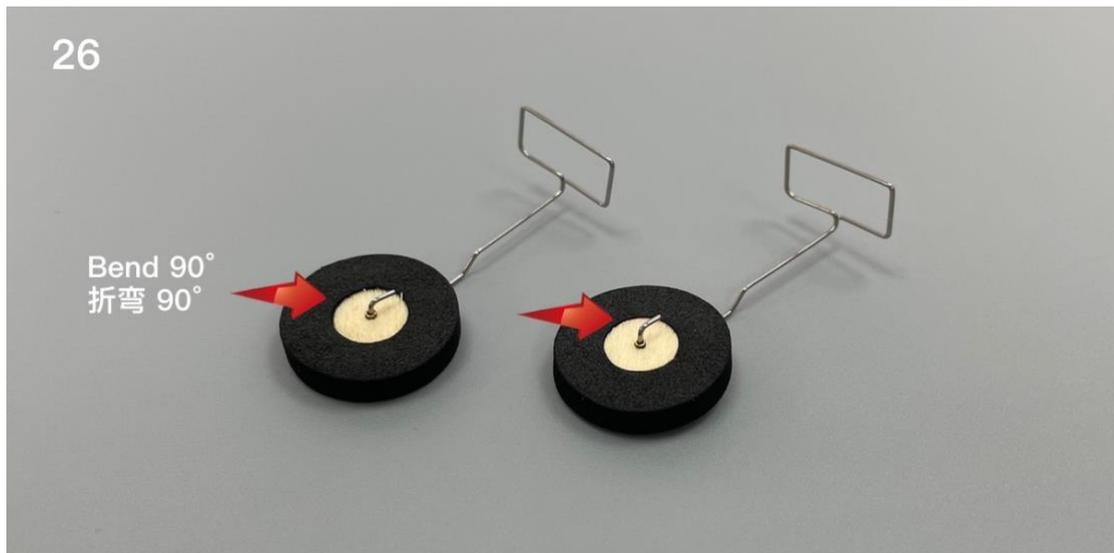

27. Install the landing gears.

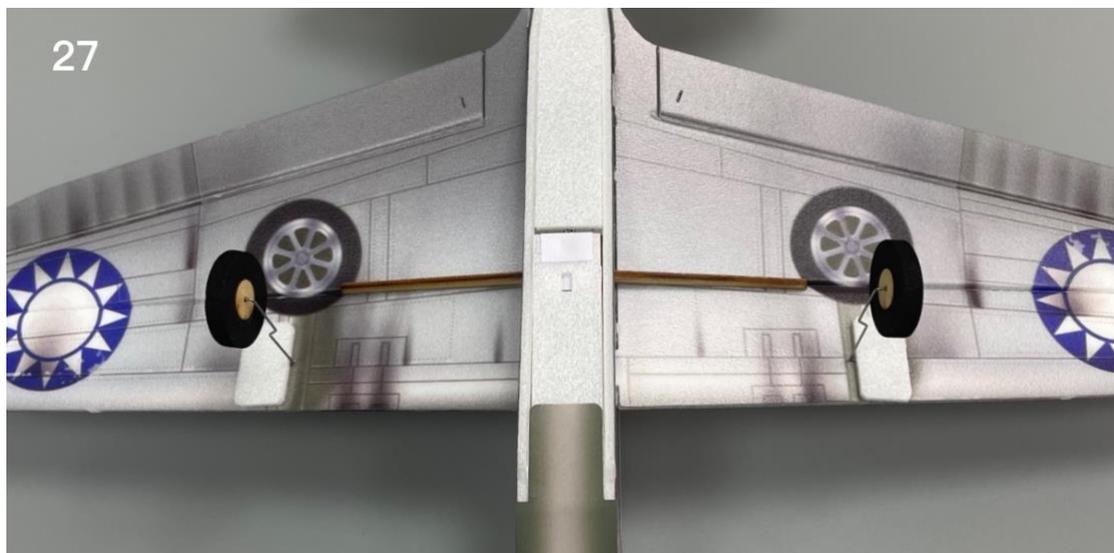

28. Install dummy fuel tank.



29. Install tail landing gear.




30. Install aileron control horns.




31. Install rudder control horns.



32. Install elevator control horns.

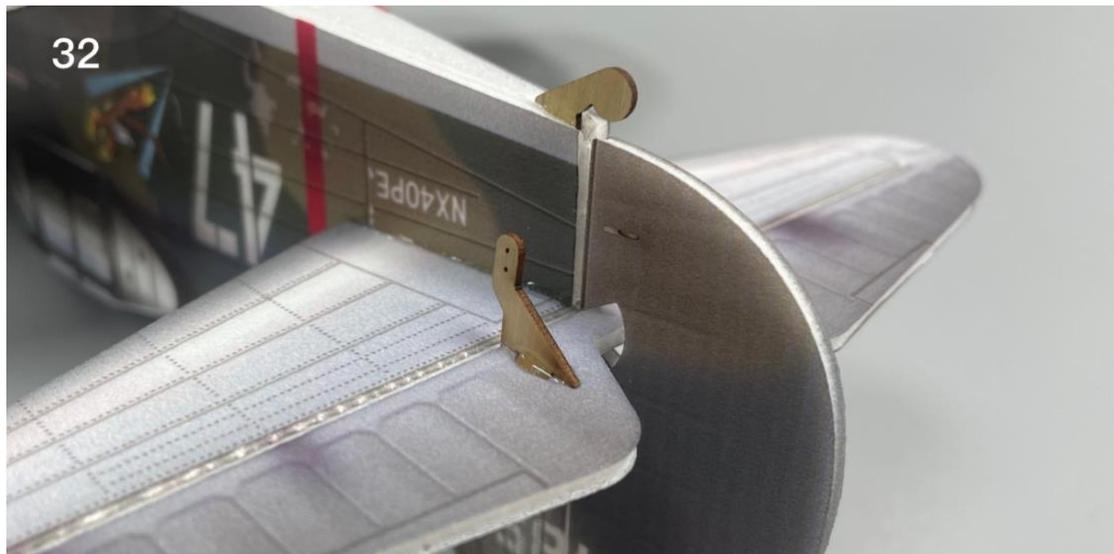

33. Use heat shrinkable tube to connect tail push rod and steel wire clip.

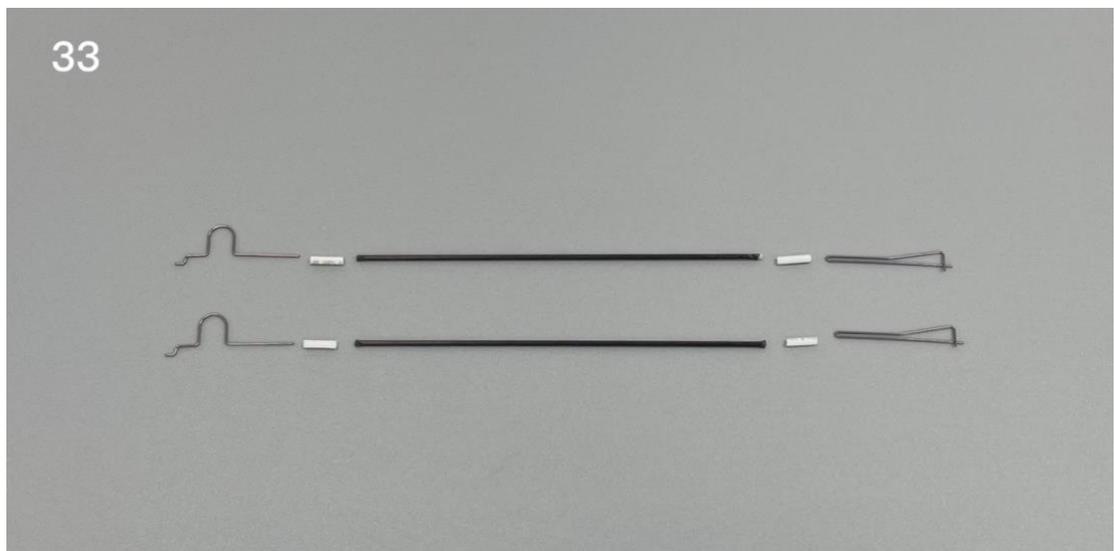

34. Use heat shrinkable tube to connect the push rod and wire clip, then use glue to fix them.




35. Attach the steel wire hooks to the control horns.




36. Cut the carbon rod to proper length and connect the wire hooks with heat shrinkable tubes.



37. Use heat shrinkable tube to connect aileron steel wire clips & hooks.

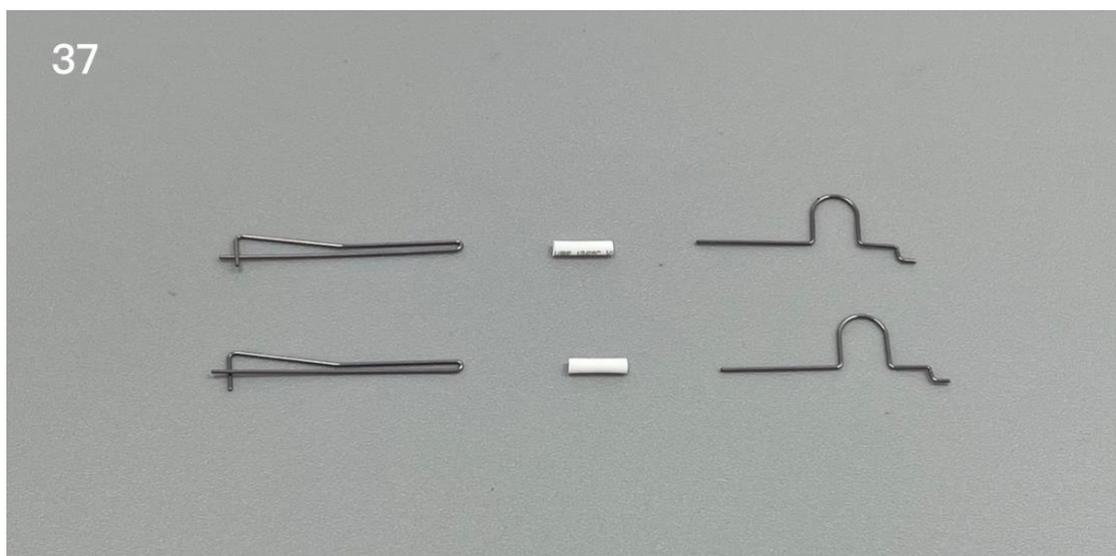

38. Attach the steel wire clips to the aileron servo arms.

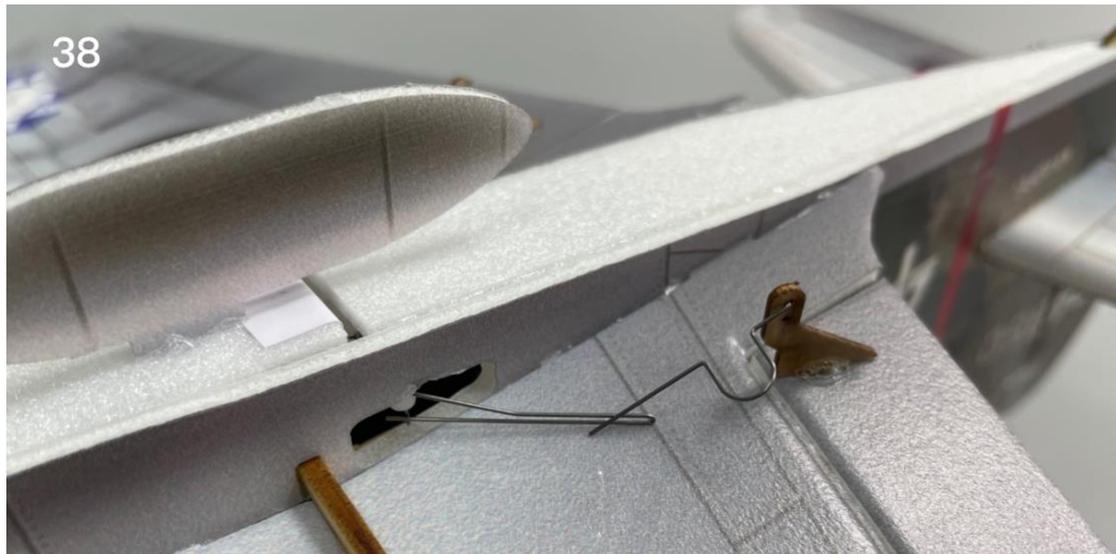

39. Connect the steel wire hooks and wire clips with heat shrinkable tubes.



40. The battery is placed in the battery compartment.



Assembly complete!



Maiden flight

- The center of gravity of the aircraft is located at the front score line of the wing.
- The active range of ailerons, elevator and rudder is 5mm on both sides.
- choose grass land for maiden flight.

MinimumRC™

*THE ULTIMATE POSSIBILITIES OF
RC AVIATION*